

UR Compatibility Guide

SUPPORTED ROBOTS

Controller	Minimum Software Version
CB-Series (all robots)	3.14.3
e-Series (all robots)	5.9.4


REQUIREMENTS

Requirement	Part Number	Description	Supplier
3/8" Plastic Cord Grip	BSPAX-11-W	Required for routing safety cabling into the UR Control Box.	Automation Direct
Cat5e Ethernet Bulkhead Connector	1546413-3	Required for connecting two Ethernet cables at the base of the UR Control Box.	Mouser
Cat5e Shielded Ethernet Cable, 3ft	9953K22	Required for connecting the internals of the UR Control Box to the Ethernet Connector.	McMaster-Carr
Cat5e Shielded Ethernet Cable, 15ft	7734T5	Required for connecting the Ethernet Connector to a IPC.	McMaster-Carr
Ethernet Bulkhead Dust Cover	1-1546406-1	Protects the Ethernet Connector when the outer Ethernet cable is not plugged in.	Mouser
USB flash drive, 8GB or larger	R-400030	Required for updating Polyscope.	READY Robotics


CONFIRMING SOFTWARE REQUIREMENTS

Follow these steps to check the software version on a UR robot controller.

- 1 Power on your UR controller.
- 2 On the UR teach pendant, go to the **About** page.

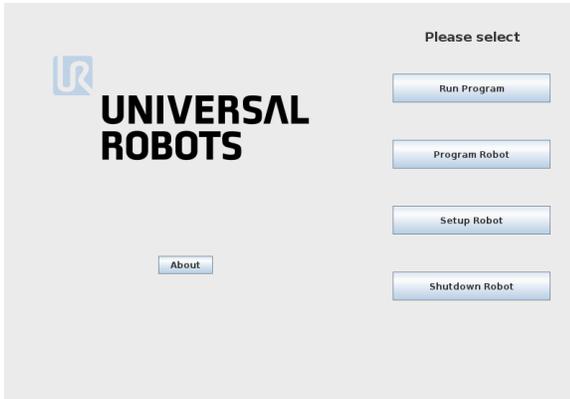

CB-Series: About Button (on Home Screen)

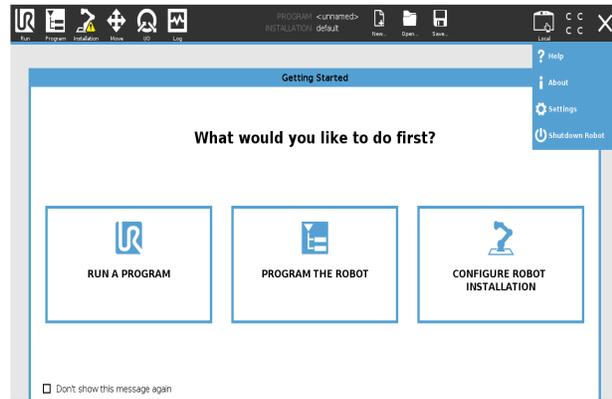


e-Series: About Button (in Hamburger Menu)

- 3 In the **Version** tab, look for the **Universal Robots Software** version.



CB-Series: Version Tab

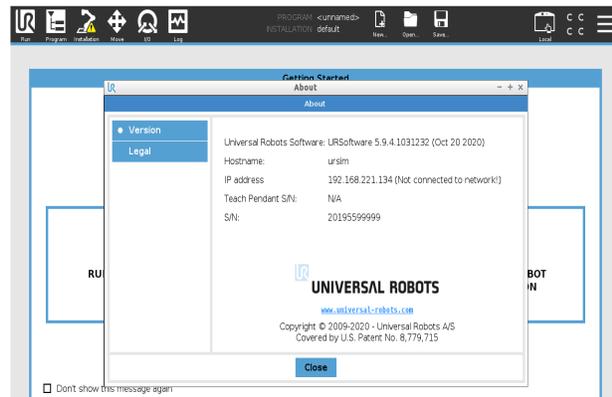

e-Series: Version Tab

- 4 If your UR software is older than the requirement, download an update at Universal Robots Support site:
www.universal-robots.com/articles/ur/documentation/all-legacy-download-center.

Note: *If you have a CB-Series robot with an old Polyscope version, you may need to update sequentially before jumping to the latest version. Refer to UR guidelines for more info.*