



FANUC R-30iB Mate Plus Start Up Guide (CIP Safety)



The documentation, best practices, and recommendations provided by READY Robotics do NOT constitute safety advice. Products sold through READY Robotics are not by themselves a fully integrated workcell. As required in ISO 10218-2, READY Robotics strongly recommends performing a complete risk assessment of the integrated workcell per ISO 12100. You may wish to use the methodology found in the ANSI/RIA TR R15.306 Task-based Risk Assessment Methodology.

CONTENTS

Overview	4
Hardware Requirements	5
Software Requirements	7
Installing the Safety Controller	10
Connecting the READY pendant	11
Connecting the Robot and IPC	14
Powering On	16
Setting Up FANUC CIP Safety	17
Programming the Safety Controller	21
Signing In to Forge/OS	22
Configuring the Robot for Forge/OS	24
Appendix A: Setting Up Forge/OS	32
Installing Forge/OS	32
Activating Forge/OS with a License Code	40
Choosing Preferences	43
Appendix B: Tool Loading Steps	45
Resources	48

OVERVIEW

Welcome to the FANUC Start Up Guide Forge/OS 5. This guide covers the following hardware:

Robot Controller	R-30iB Mate or R-30iB Mate Plus
Safety Hardware	Third-Party Safety PLC with CIP Safety - integrates the READY pendant Key Switch, Enabling Switch, and Emergency Stop to robot safety signals through CIP Safety.
READY Hardware	READY pendant and a non-READY industrial PC (IPC).

Here are the steps you will follow:

1. Prepare safety hardware.
2. Connect the READY pendant.
3. Connect the IPC.
4. Power on the system.
5. Program your safety hardware.
6. Configure your robot for Forge/OS.
7. Control your robot with Forge/OS!

HARDWARE REQUIREMENTS









Image	Part Name	Description	Vendor	Part Number
	Industrial PC (IPC)	Hosts Forge/OS. Note: Refer to the Forge/OS 5 User Manual for IPC requirements.		
	READY pendant	The touch screen interface for Forge/OS.	READY Robotics	112563
	R-30iB-Mate or Mate Plus Robot Controller	Connects the robot arm to power and to other devices.	FANUC	
	FANUC Teach Pendant	Required for setup and error recovery.	FANUC	
	24V/2.5A Power Supply	Powers the READY pendant and more. Min./Max. current: 2.5/5.0 Amps.		e.g., Siemens 6EP1332-5BA00

Image	Part Name	Description	Vendor	Part Number
	Polycarbonate Enclosure or Electrical Cabinet	Protects the electrical parts in an enclosure.		
	Cat5e Shielded Ethernet Cable (x3)	<ul style="list-style-type: none"> ▪ Connects the robot controller to a IPC. ▪ Connects the READY pendant to a IPC. ▪ Connects the robot controller to the CIP Safety PLC. 		
	Safety Controller with CIP Safety (see note below)*	Allows use of pendant safety features and other safeguard devices (i.e. safety fence).		e.g., Omron NX-I/O Series, Allen-Bradley GuardLogix

Note: The reference material in this guide is general. The safety controller solution you choose should meet these minimum requirements:

- 4x dual channel safety inputs
- CIP over EtherNet/IP connection
- Basic Safety Logic configuration

SOFTWARE REQUIREMENTS

This section explains how to check your FANUC software for these version and option requirements.

Required Option	Description
R-30iB Mate Firmware: V8.10P/30 (05/2018) or equivalent R-30iB Mate Plus Firmware: V9.10P/33 (02/2021) or equivalent	Minimum firmware version supported by Forge/OS.
RTL-R632 KAREL	Required for Forge programs to run on the robot controller.
RTL-R648 User Socket Messaging	
RTL-R859 Advanced DCS	Required to jog the robot with the READY pendant.
RTL-R713 SIT Ethernet/IP Safety	Required to connect CIP safety for pendant and fence.
RTL-R784 Ethernet/IP Adapter	

- 1 Plug the FANUC controller into a power source. Follow FANUC instructions for powering the controller.
- 2 Turn the power switch on the FANUC controller clockwise to power the controller on. Wait for the controller to boot up.
- 3 On the teach pendant keypad, press the **STATUS** button at the bottom.

- 4 In the STATUS menu, press [TYPE] (F1), then press **Version ID (2)**.



- 5 Look for **Software Edition No.** and note the version number next to it. If your system version is older than the requirement, contact your FANUC distributor to upgrade.



- 6 Press the right arrow on the touchscreen menu bar, then press **ORDER FI**. The installed options appear with their part numbers.



- 7 Look for the required options. Under "Continue displaying?", press **YES** to see more of the installed options. If any of your controller's required options are missing, contact your FANUC distributor to upgrade.



INSTALLING THE SAFETY CONTROLLER

In a safety cabinet or polycarbonate enclosure, you will install the CIP safety controller, a power supply, and terminal blocks for connecting safety input leads.

1 In an enclosure (i.e., safety cabinet), install these:

- DIN rail (as needed)
- The safety controller
- The 24V power supply
- Terminal blocks (as needed)
- DIN rail ends (to prevent terminal blocks from moving)

***Tip:** See each product's manufacturer guides for installation instructions.*

2 Install cord grips through the enclosure as needed to provide strain relief for cables.

3 Connect the 24V power supply output to your safety controller power supply inputs.

4 Connect the 24V power supply to external power following power supply instructions.

***Important:** After confirming everything powers up, disconnect the power supply from external power before moving on.*

CONNECTING THE READY PENDANT

The READY pendant includes these safety outputs:

1. Key Switch (Robot Operation Mode)
2. Three-Position Enabling Switch
3. Emergency Stop Button



The end of the READY pendant cable includes:

1. One RJ45 Ethernet cable for communication with the IPC.
2. 15 Flying leads—2 for power, 12 for safety I/O, and 1 unused lead.



Electric Shock Warning: Disconnect all components from power sources before attempting this installation.

- 1 Follow these sub-steps to connect the READY pendant wiring. When connecting the READY pendant flying leads to the safety controller, refer to the destinations in table below.

Click [this link](#) to download a wiring diagram for reference.

Pendant Flying Leads	Function	Destination Terminal
Brown	Enabling Switch Circuit 1	Test Output 1
Yellow	Enabling Switch Circuit 1	Safety Input 3
Green	Enabling Switch Circuit 2	Test Output 2
Grey	Enabling Switch Circuit 2	Safety Input 4
Pink	+24V DC	External Power Supply (+24V)
Green/Brown	Emergency Stop Circuit 1	Test Output 1
White/Green	Emergency Stop Circuit 1	Safety Input 1
Grey/Pink	Emergency Stop Circuit 2	Test Output 2
Red/Blue	Emergency Stop Circuit 2	Safety Input 2
Black	0V DC	External Power Supply (0V)
Violet	Key Switch Circuit 1	Test Output 1
White/Pink	Key Switch Circuit 1	Safety Input 5
White	Key Switch Circuit 2	Test Output 2
Blue	Key Switch Circuit 2	Safety Input 6
White/Blue	Not Connected	

Important: Refer to safety controller documentation for proper use of safety test outputs. You can share a test output among different devices, but each channel of a device should use a different test output.

- a Connect the READY pendant's Ethernet cable to the IPC. You may connect the pendant through an Ethernet switch to increase the number of Ethernet ports.

b Connect the pendant's power leads to a 24V DC, 2.5A source. Connect the Pink wire to +24V and the Black wire to 0V.

c Connect the remaining safety I/O leads to your control panel or safety cabinet. Make your own cable/wiring for the 12 safety signals long enough to reach their destinations in the table. Include ferrules at the end of your wiring to insert in the terminal blocks.

2 Wire the external safety fencing or another safeguarding device:

a **If you are using safety fencing or another safeguard device**, connect it to the safety controller following the table below.

Function	Destination
Fence Contact 11 (Circuit 1)	Test Output 3
Fence Contact 12 (Circuit 1)	Safety Input 7
Fence Contact 21 (Circuit 2)	Test Output 4
Fence Contact 22 (Circuit 2)	Safety Input 8

b **If you choose to NOT use a safeguard device**, jumper the safety fencing circuits: Connect safety input 7 with its test output and connect safety input 8 with its test output.

3 Open the FANUC controller:

a Use a flat head screwdriver to turn the lock below the power switch counterclockwise.

b Turn the power switch counterclockwise to release the door.

4 Feed one end of a Cat5e STP Ethernet cable through the foam panel on the side or back of the FANUC controller. Refer to controller documentation for proper cable sealing.


5 Inside the FANUC controller, connect the end of the Ethernet cable into LAN port 2 (**CD38B**) on the main board.

6 Connect the other end of the Ethernet cable to the CIP interface on your safety controller.

CONNECTING THE ROBOT AND IPC

Forge/OS must be able to communicate with the FANUC robot controller. This section will help you connect the IPC and robot controller using a Cat5e STP Ethernet cable.


- 1 Find a Cat5e STP Ethernet cable long enough to reach from the IPC to inside the FANUC controller.
- 2 Plug one end of the Ethernet cable into a **LAN** port on the IPC device (or a network switch connected to the IPC).
- 3 Inside the FANUC controller, remove one of the knockouts on the foam cable panel. Feed the Ethernet cable through it.
- 4 Plug the cable into LAN Port 1 (**CD38A**) on the Main Board below the backplane.

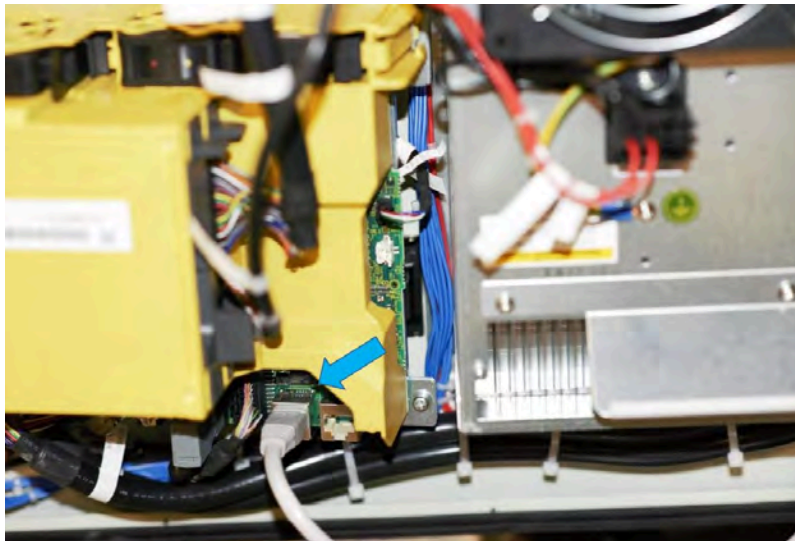

- 5 Manage the cables.
 - a Use zip ties to bind cables at the top and bottom of the controller enclosure.

Important: Ensure that there is enough slack for the door to open and close without creating tension.

- b** Cut the zip ties so that the cut-ends are flush with the connectors.

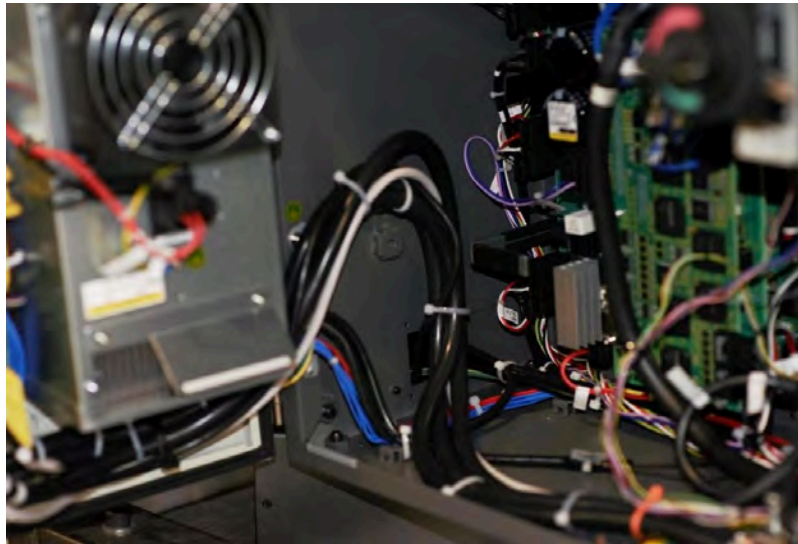

- 6** Close the controller door. Lock it using a flat head screwdriver.

POWERING ON

In this section, you power on the system and prepare the FANUC teach pendant.

- 1 Reconnect the FANUC controller to power and power it on. Consult your Manufacturer's manual for instructions on powering the FANUC controller.
.....
- 2 Power on your IPC device and other devices.
.....
- 3 If there are issues, power off each device, disconnect from power supplies, and check your wiring.
.....
- 4 Turn the switch on the front panel of the FANUC controller to **T1** mode.
.....
- 5 Turn the switch on the FANUC teach pendant to **ON**.
.....

SETTING UP FANUC CIP SAFETY

In this section, you set up the FANUC controller to connect to Forge/OS and the CIP Safety PLC.

- 1 Set the switch on the front panel of the FANUC controller to **T1** mode. Turn the switch on the FANUC teach pendant to **ON**.

- 2 On the FANUC teach pendant, set the robot's Port 1 IP address for Forge/OS:

- a On the FANUC teach pendant, go to the Host Communication screen: Press the **MENU** button, then scroll down to **SETUP (6)**. Then scroll right to **Host Comm (8)**. Press **ENTER**.

*Tip: Or on the **SETUP** screen, press **[TYPE] (F1)**, select **NEXT**, then select **Host Comm**.*

- b On the list of Protocols, select **TCP/IP** and press **ENTER**.



- c For Port 1, select the line that reads **Port#1 IP addr...** and press **ENTER**.

- d Set the **IP Address** to **192.168.1.20** and set the **Subnet Mask** to **255.255.255.0**.

- 3 Change the robot's Port 2 settings for the CIP Safety PLC:

- a In the TCP/IP settings, press **PORT (F3)** to switch to Port 2. Then select the line that reads **Port#2 IP addr...** and press **ENTER**. Set the IP address of this port to **192.168.2.20** using the pendant keypad. Set the Subnet Mask to **255.255.255.0**.

- b** Go to the Ethernet/IP menu: press the **MENU** button, then choose **I/O**, then choose **ETHERNET/IP**.
- c** Press **F3** to select **Safety**.
- d** Select **Ethernet Interface** and press **[Choice] (F4)**. Set the **Ethernet Interface** to "Port 2."

4 Change DCS settings for CIP communication:

- a** Go to the DCS screen by pressing the **MENU** button, **NEXT (0)**, **SYSTEM (6)**, then **DCS**.
- b** Press **PREV** to ensure you are on the main DCS screen.
- c** Select **CIP Safety** and press **ENTER**.



- d In the CIP Safety menu, set **Enable/bypass** to "ENABLE." Set both the input and output sizes to "2."



- e Press **PREV** to return to the main DCS screen. Select **Safe I/O Status** and press **ENTER**.

- f On the Safe I/O Status screen, press **[DATA] (F2)** and select **CSI**. Make sure the first four bits are labeled for a safety function.

Note: Make a note of these CSI signal comments. They may not match the image below. You will configure the safety PLC so these four bits correspond with the labeled safety functions.



5 Apply changes to the FANUC DCS settings:

- a** Go to the DCS screen by pressing the **MENU** button, **NEXT (0)**, **SYSTEM (6)**, then **DCS**.

*Tip: Or on the **SYSTEM** screen, press **[TYPE] (F1)**, then select **DCS**.*

- b** Press **PREV** to ensure you are on the main DCS screen.

- c** Press **APPLY (F2)** to confirm the settings. If you installed Forge/OS files onto the FANUC controller before, there may not be changes to apply.

- d** Enter the password (default: **1111**). Confirm the settings by pressing **OK (F4)**.

6 Restart the FANUC controller to apply the settings. Power the controller off, wait 5 seconds, then power it on.

PROGRAMMING THE SAFETY CONTROLLER

In this section, you program your CIP Safety PLC to pass through safety inputs to the FANUC CSI signals.

1 On a PC, install the manufacturer configuration software for your safety controller solution. Refer to safety controller instructions.

2 Connect your PC to the safety controller. Refer to safety controller instructions.

3 Open the configuration software on your PC. Select your safety controller model and other options, if required.

4 Earlier you configured the FANUC Port 2 network settings - IP address (**192.168.2.20**) and subnet mask (**255.255.255.0**). Configure your safety controller with compatible network settings.

a Set the IP address of the safety controller to **192.168.2.10** or another address in the same subnet.

b Set the subnet mask of the safety controller to **255.255.255.0**.

5 On the safety controller, create a CIP connection between with the FANUC controller following instructions from the safety controller manufacturer and the FANUC DCS Operators Manual.

Note: This process can be complex. Contact your safety controller distributor for support if needed.

6 Configure the safety controller to pass the safety input signals through to these CIP safety outputs:

Safety Device	CIP Safety Output (bit)	FANUC CIP Input
Pendant Enabling Switch (HIGH=Enabled)	0.0	CSI [1]
Pendant Key Switch (HIGH=in Auto)	0.1	CSI [2]
Safety Fence (HIGH=Closed)	0.2	CSI [3]
Pendant Emergency Stop Switch (HIGH=Released)	0.3	CSI [4]

7 In the configuration software, login or connect to the safety controller and transfer your configuration onto it.


8 If applicable, set the safety controller to "Run" or "Auto" mode.

9 Disconnect your PC from the safety controller.

SIGNING IN TO FORGE/OS


Follow these steps to pair the READY pendant with the IPC and sign in to Forge/OS 5.

- 1 If you need to install Forge/OS 5 on your IPC, stop here and follow all the steps in [Appendix A](#), then come back to these steps.
- 2 When you power on your READY pendant and IPC, the Pendant Pairing screen appears on the READY pendant. Tap the blue **PAIR PENDANT** button when it appears. It may take up to one minute to appear.

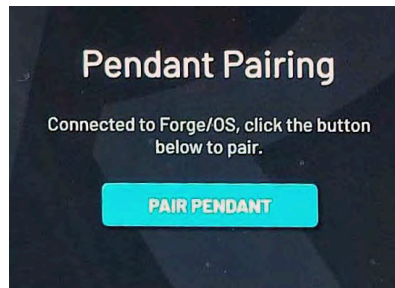


Note: If the pendant fails to pair or the **PAIR PENDANT** button is unavailable for longer than two minutes, check the Ethernet connection to the **IPC**. If the pendant still doesn't pair, connect the pendant's Ethernet cable to another LAN port on the **IPC**. The **READY pendant** IP Address is preset to 172.16.255.253. The network interface that the pendant connects to should use an IP Address of 172.16.255.x and Subnet mask 255.255.255.0.

- 3 Tap **Admin** and sign in. The default Admin password is "forgeadmin".

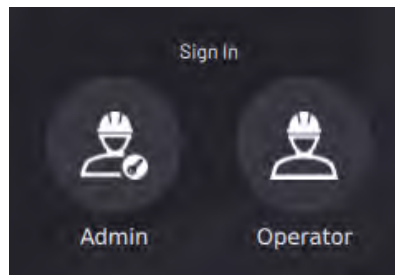

- 4 If Forge/OS is inactive, it opens the Settings app and prevents you from opening other apps. If you see the screen below, follow [Activating Forge/OS with a License Code](#) in Appendix A.

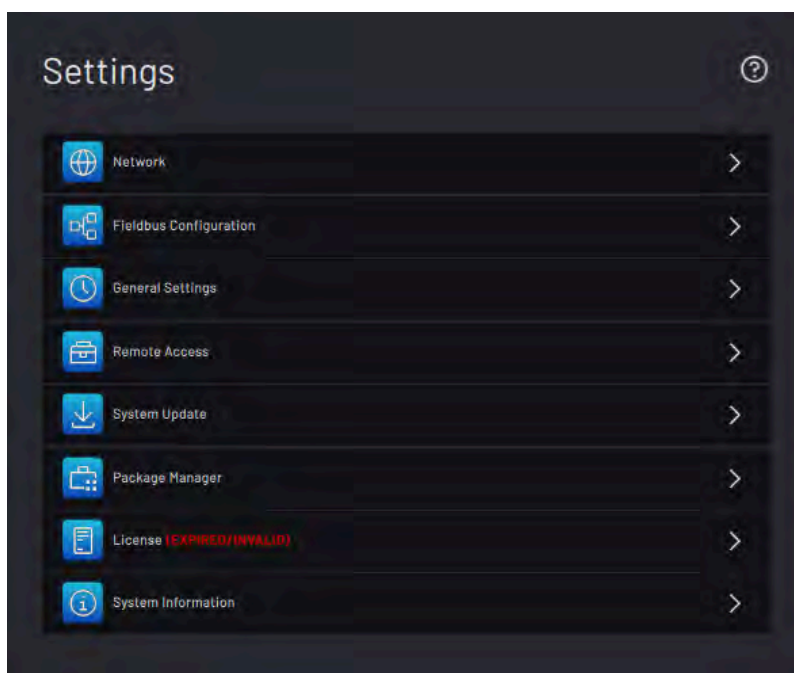

- 5 With Forge/OS active, move on to the next section.


CONFIGURING THE ROBOT FOR FORGE/OS

This section shows you how to add a robot in the Forge/OS Device Configuration app and configure the FANUC controller. Make sure the FANUC controller and Forge/OS devices are powered on.


- 1 In the **Admin** role, open the **Device Configuration** app.





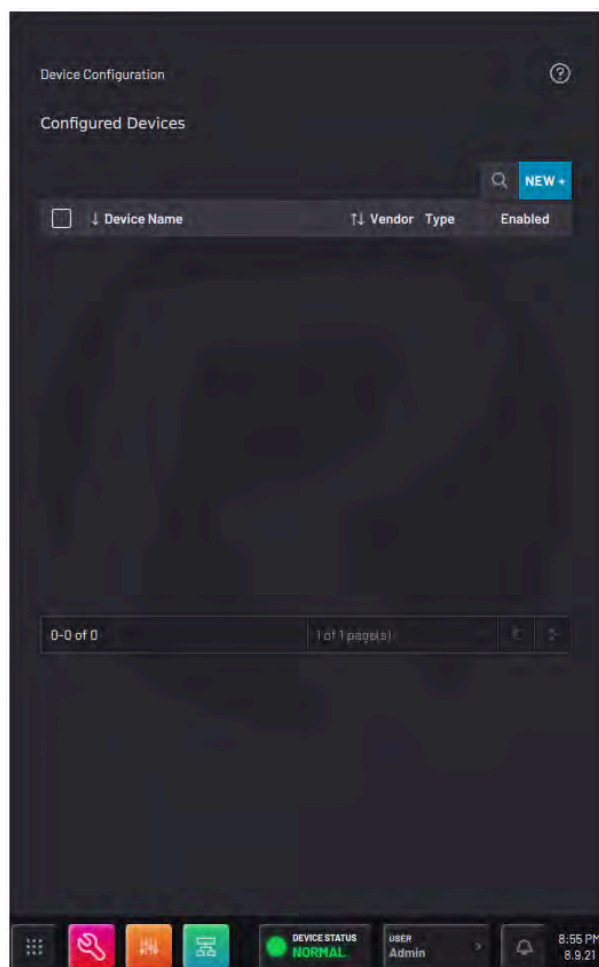




- 2 Tap **New +** to open the Device Library.

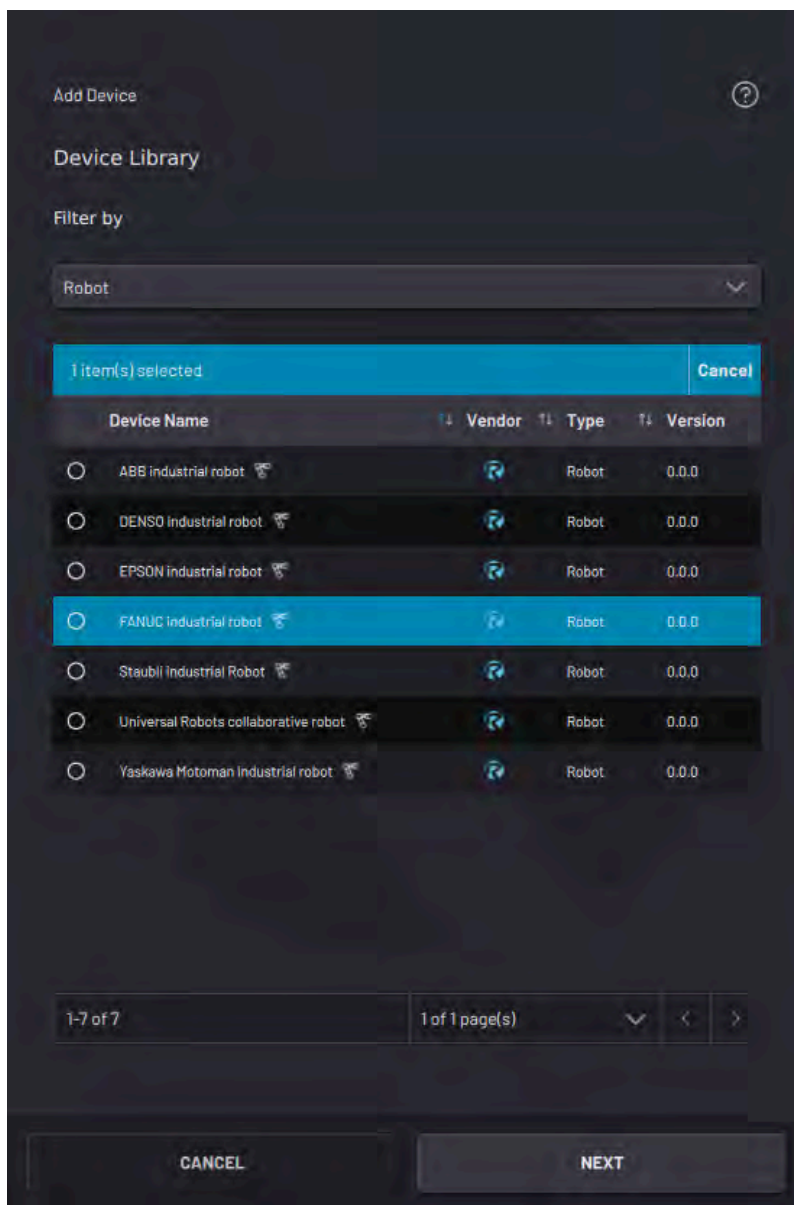

- 3 Select the **FANUC Robot** option. You can use the **Filter by** dropdown to show robot options. Tap **NEXT** to continue.



The screenshot shows the 'Add Device' screen. At the top, there's a title bar with 'Add Device' and a help icon. Below it is the 'Device Library' section. A 'Filter by' dropdown menu is set to 'Robot'. Below the filter, there's a selection bar showing '1 item(s) selected' and a 'Cancel' button. The main area is a table with columns: Device Name, Vendor, Type, and Version. The table lists several industrial robots, with 'FANUC Industrial robot' highlighted in blue. At the bottom, there's a pagination bar showing '1-7 of 7' and '1 of 1 page(s)' with navigation arrows. The bottom of the screen has two large buttons: 'CANCEL' and 'NEXT'.

Device Name	Vendor	Type	Version
<input type="radio"/> ABB industrial robot		Robot	0.0.0
<input type="radio"/> DENSQ industrial robot		Robot	0.0.0
<input type="radio"/> EPSON industrial robot		Robot	0.0.0
<input checked="" type="radio"/> FANUC Industrial robot		Robot	0.0.0
<input type="radio"/> Staubli Industrial Robot		Robot	0.0.0
<input type="radio"/> Universal Robots collaborative robot		Robot	0.0.0
<input type="radio"/> Yaskawa Motoman Industrial robot		Robot	0.0.0


- 4 Give the robot a **Device Name** and enter the **IP Address**.

Note: Enter the same IP address that you set on the FANUC controller.

- 5 Select the robot **Controller Model** and **Robot Model** in the dropdown menus.

Tip: Some FANUC controllers have multiple hardware options for connecting the **READY pendant** safety devices. Select the one that matches your setup:

- **"CIP Safety"** - You are using a CIP Safety PLC instead of the FANUC Safety I/O Board.
- **"No DCS"** - You are using Forge/OS software-driven safety instead of DCS.
- **Neither** - You installed the FANUC Safety I/O add-ons (except for the CRX, R-30iB Mini Plus).

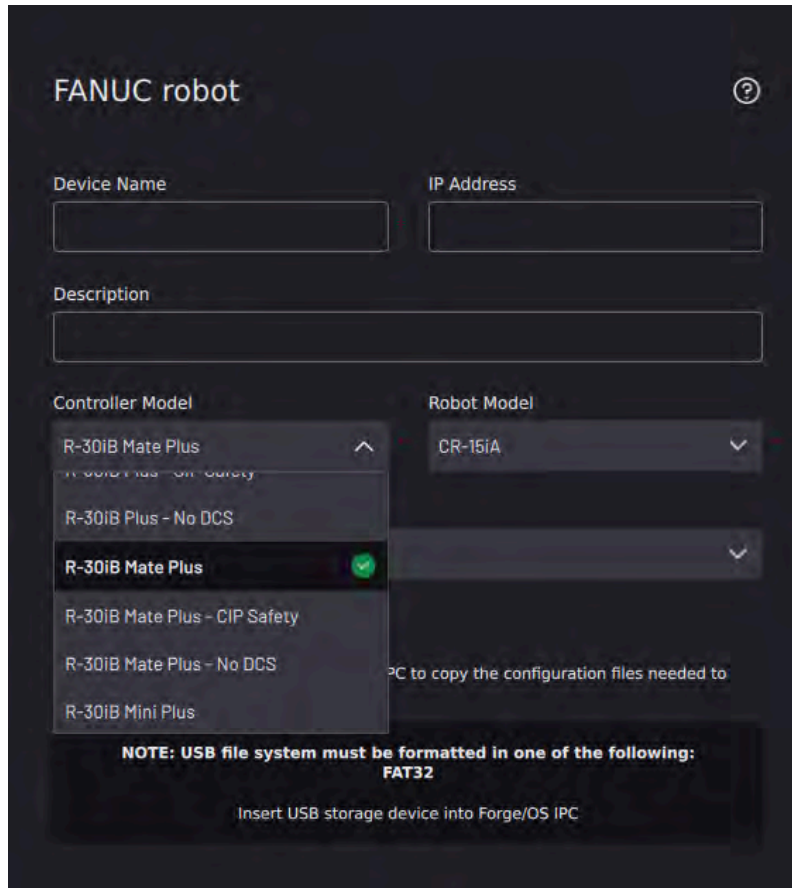

- 6 Insert a USB flash drive into the IPC as instructed on the screen. Use an empty flash drive with at least 2GB of storage.

Tip: Do not connect the USB flash drive to the **READY pendant**.

- 7 Tap **Start Transfer** and wait for it to finish.

- 8 Remove the USB flash drive when prompted.

- 9 Insert the USB drive into the USB slot on the FANUC controller. Complete these sub-steps to install the configuration files on the FANUC controller:

a Press the **SELECT** button. A list of programs appears.

b Press **MONITOR (F4)** to show the list of running programs. If any programs appear, press the **FCTN** button. Then press **1** to **ABORT (ALL)**. Press **1** and **ABORT (ALL)** at least one more time to make sure that all running programs stop.

Note: If you do not abort all running programs, the Forge configuration files might not update properly. This could result in a "Specified program is in use" message during file transfer.

c Press the **MENU** button on the FANUC teach pendant.

d Press **FILE (7)**.

e Press **UTIL (F5)**, highlight the **Set Device (1)** option, and press the **ENTER** button.

f Choose the **USB Disk (UD1:)** option.

Note: If you inserted the USB drive into the teach pendant, choose the **UT1:** option.

g Highlight the **All Files** option by using the arrow keys and press **ENTER**.

h The contents of the USB drive will appear. Use the arrow keys and the **ENTER** key to find and highlight **FORGE-OS > READY-FANUC-DRIVER > FORGE_INSTALL**, then press **ENTER**.

i Press **Yes (F4)** for the prompt asking if you want to execute the file.

j The FANUC Controller first displays **# Backing Up Controller Config #**. Wait for the FANUC Controller to say **Execution is completed successfully**. At a later time, you may copy the backup files in the FANUC Backup folder off of the USB drive.

Note: If you get a "Specified program is in use" message instead of "Execution is completed successfully", try aborting all programs again. Press **FCTN** then **1** for **ABORT (ALL)**.

k Press **OK (F4)** and remove the USB drive from the FANUC controller.

10 Apply changes to the FANUC DCS settings:

a Go to the DCS screen by pressing the **MENU** button, **NEXT (0)**, **SYSTEM (6)**, then **DCS**.

*Tip: Or on the **SYSTEM** screen, press **[TYPE] (F1)**, then select **DCS**.*

b Press **PREV** to ensure you are on the main DCS screen.

c Press **APPLY (F2)** to confirm the settings. If you installed Forge/OS files onto the FANUC controller before, there may not be changes to apply.

d Enter the password (default: **1111**). Confirm the settings by pressing **OK (F4)**.

11 Restart the FANUC controller to apply the settings (power the controller off, then power it on). While the controller is restarting, set the switch on the front panel of the FANUC controller to **AUTO** mode. Turn the switch on the FANUC pendant to **OFF**.

12 For a **collaborative** robot, follow these sub-steps to confirm the payload each time the controller boots up and each time a READY pendant notification tells you to.

a Go to the Collaborative Robot DCS screen by pressing the **MENU** button, **NEXT (0)**, **System (6)**, then **DCS**.

b Press **PREV**, highlight the **Collaborative Robot** option, and press **ENTER**.

c Press **CONFIRM (F2)**. Enter the password (default **1111**) and follow the prompts by answering **YES (F4)**.

Note: Each time a FANUC collaborative robot is turned off and then on again, the payload must be confirmed. If possible, wait for 30 minutes after booting. It can take up to 30 minutes for the Force Sensor to calibrate.

13

14 Confirm that the Forge/OS programs are running on the FANUC teach pendant. Press the **SELECT** button. A list of programs appears.

15 Press **MONITOR (F4)** to show the list of running programs. There should be three "FOS" programs running. If nothing happens when you press **MONITOR (F4)** or you see fewer than three "FOS" programs on the monitor, follow these sub-steps.


a Turn the switch on the FANUC teach pendant back to **ON**.

- b** On the FANUC teach pendant, press the **PREV** button to return to the list of saved programs.
- c** Use the arrow keys to highlight the program labeled **Forge_OS**.
- d** Hold down one of the three-position enabling switches on the back of the FANUC pendant to the middle position.
- e** While holding down the enabling switch, press and hold the **SHIFT** button and then press the **FWD** button once. Then release **SHIFT** and the enabling switch.
- f** Check the monitor again. Press **MONITOR (F4)**. There should be three programs listed.
- g** Set the switch on the front panel of the FANUC controller to **AUTO** mode. Switch the FANUC teach pendant to **OFF**.

- 16** In Forge/OS, confirm your device settings and tap **SAVE**. Forge/OS attempts to connect with the robot controller for up to 20 seconds.

Note: When you first connect to a robot, it's normal to see some robot errors and/or warnings on the **READY pendant**. Ignore these for now. You will clear them after you finish adding the robot to Forge/OS.

- a** If the robot controller fails to connect, you see this pop-up.

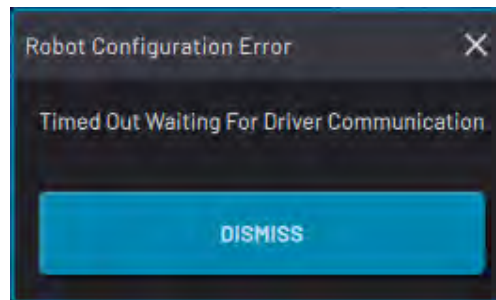


Click **DISMISS**, do the following, then try to tap **SAVE** again:

- Check the Ethernet connection between the robot controller and IPC.
- Check the network settings on the robot controller.
- Check if the robot controller is on and in the correct operating mode (in auto or remote mode).
- Select the correct robot controller and robot models in Device Configuration.


- 17** When the robot connects, you can add Tool Center Points (TCPs) or Payloads for the robot. You can come back to this later by editing the device's configuration. Tap **SAVE** to continue.

Note: The default TCP is at the robot's tool flange. The default Payload is zero.

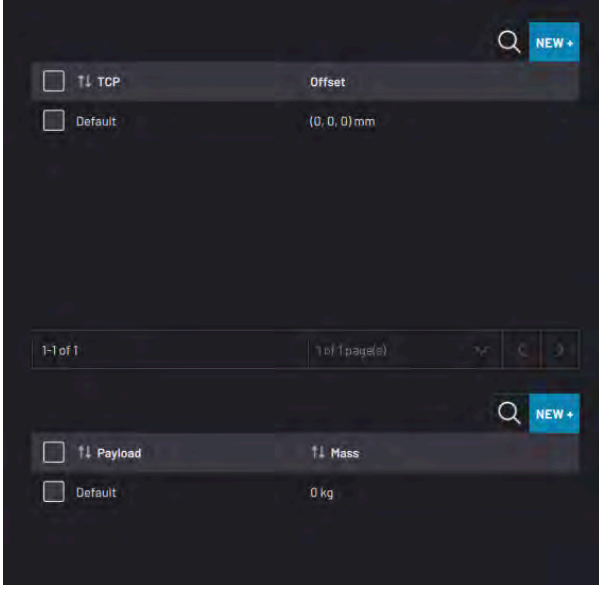

The screenshot shows a configuration window with two sections. The top section is for TCP (Tool Center Point) settings, with a search icon and a 'NEW +' button. It includes a checkbox for 'TCP' and a label 'Offset'. Below it, a checkbox for 'Default' is shown next to the value '(0, 0, 0) mm'. The bottom section is for Payload settings, also with a search icon and a 'NEW +' button. It includes a checkbox for 'Payload' and a label 'Mass'. Below it, a checkbox for 'Default' is shown next to the value '0 kg'. A pagination bar at the bottom indicates '1-1 of 1' and '1 of 1 page(s)'.

- 18** (Optional): Set up the robot controller's Input/Output (IO) signals for use in the Device Control Panel and Task Canvas.

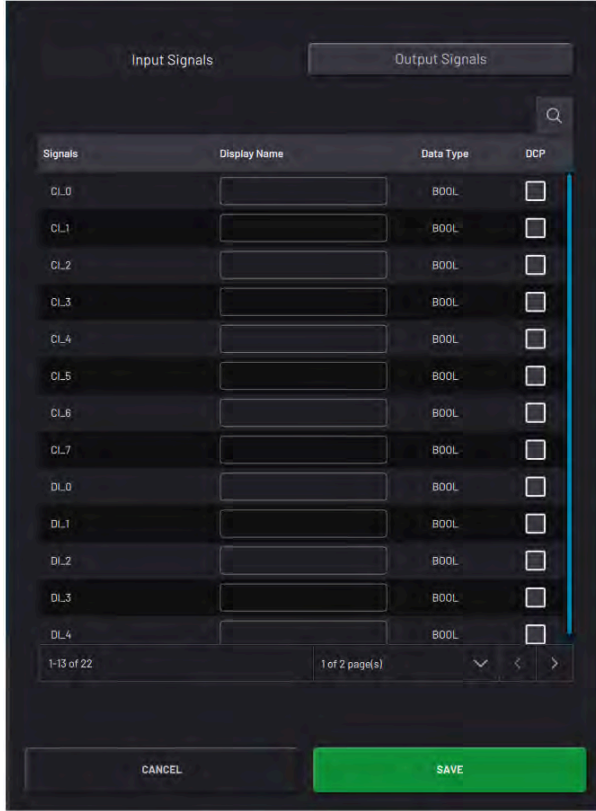

The screenshot shows a configuration window for Input/Output (IO) signals. It has two tabs: 'Input Signals' and 'Output Signals'. Below the tabs is a search icon and a table of signals. The table has four columns: 'Signals', 'Display Name', 'Data Type', and 'DCP'. The 'Signals' column lists CL0 through CL7 and DL0 through DL4. The 'Display Name' column has input fields for each signal. The 'Data Type' column shows 'BOOL' for all signals. The 'DCP' column has checkboxes for each signal. A pagination bar at the bottom indicates '1-13 of 22' and '1 of 2 page(s)'. At the bottom of the window are 'CANCEL' and 'SAVE' buttons.

Signals	Display Name	Data Type	DCP
CL0		BOOL	<input type="checkbox"/>
CL1		BOOL	<input type="checkbox"/>
CL2		BOOL	<input type="checkbox"/>
CL3		BOOL	<input type="checkbox"/>
CL4		BOOL	<input type="checkbox"/>
CL5		BOOL	<input type="checkbox"/>
CL6		BOOL	<input type="checkbox"/>
CL7		BOOL	<input type="checkbox"/>
DL0		BOOL	<input type="checkbox"/>
DL1		BOOL	<input type="checkbox"/>
DL2		BOOL	<input type="checkbox"/>
DL3		BOOL	<input type="checkbox"/>
DL4		BOOL	<input type="checkbox"/>

- a** Enter a **Display Name** (i.e. "Open Machine Door", "Open Pneumatic Vise", or "Start Machining Cycle") to show what each signal does in other apps.

- b** If you want a signal to appear in the Device Control Panel, check the **DCP** box next to that signal.


Note: To use these I/O signals, integrate your I/O devices with the robot controller.

- c** Tap **SAVE**. Forge/OS returns to the Configured Devices list, which shows the new robot as **enabled**.

Note: A device is **enabled** when its switch is green and toggled to the right.

- 19** Follow these steps to clear robot errors:

- a** Tap the **Device Status** button on the Toolbar to expand the Device Status Panel. The robot is listed with two buttons: **MORE** and **RESET**.

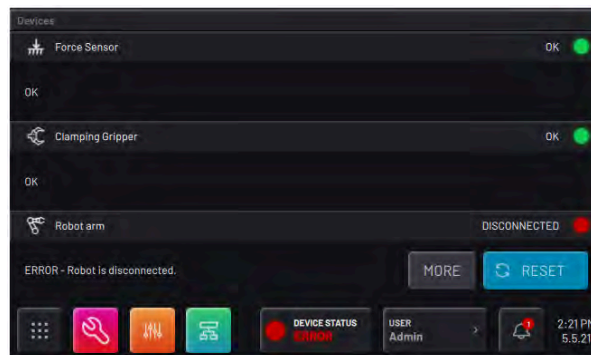

- b** Tap **RESET** to try to recover from the errors. If you can't **RESET** an error, tap **MORE** to get more details and instructions.

- 20** If you added TCPs/payloads, follow the FANUC Tool Loading Steps in [Appendix B](#). You need to perform the Tool Loading Steps each time you add TCPs and/or payloads.

APPENDIX A: SETTING UP FORGE/OS

INSTALLING FORGE/OS

Follow these steps to install Forge/OS and sign in to the Admin role. Installation takes about 30 minutes, depending on the resources of the IPC.

- 1 To install Forge/OS, follow these substeps. You need a Forge/OS installation USB flash drive. Contact your READY Robotics distributor for an installation USB drive.

Important: Installing Forge/OS will erase all data on the target hard drive.

- a Connect a monitor, keyboard, and mouse to the IPC where you want to install Forge/OS.



- b Plug the Forge/OS installation USB flash drive into the IPC.

Tip: If you need more USB ports, use a USB 3.0 hub.

- c Restart the IPC. While the IPC is powering on, press the keyboard hotkey that takes you to the Boot Menu.


Tip: The key that opens the Boot Menu depends on the **IPC** model. The most common keys that do this are ESC, F10, F11, or F12. Refer to your computer's documentation for boot options.

- d From the boot options, select **Install Forge/OS** to boot from the installation USB flash drive.

- e The installer may take several minutes to load. Wait until the installation wizard opens.


f

Select your language. Then click **Install Forge**.

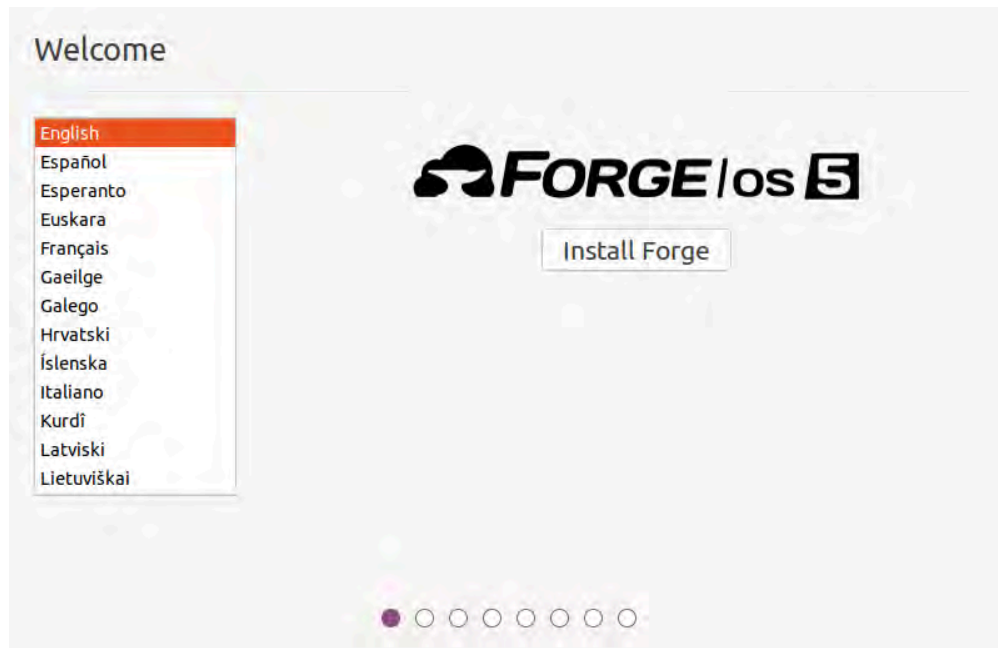


g

Choose a keyboard layout. Then click **Continue**.

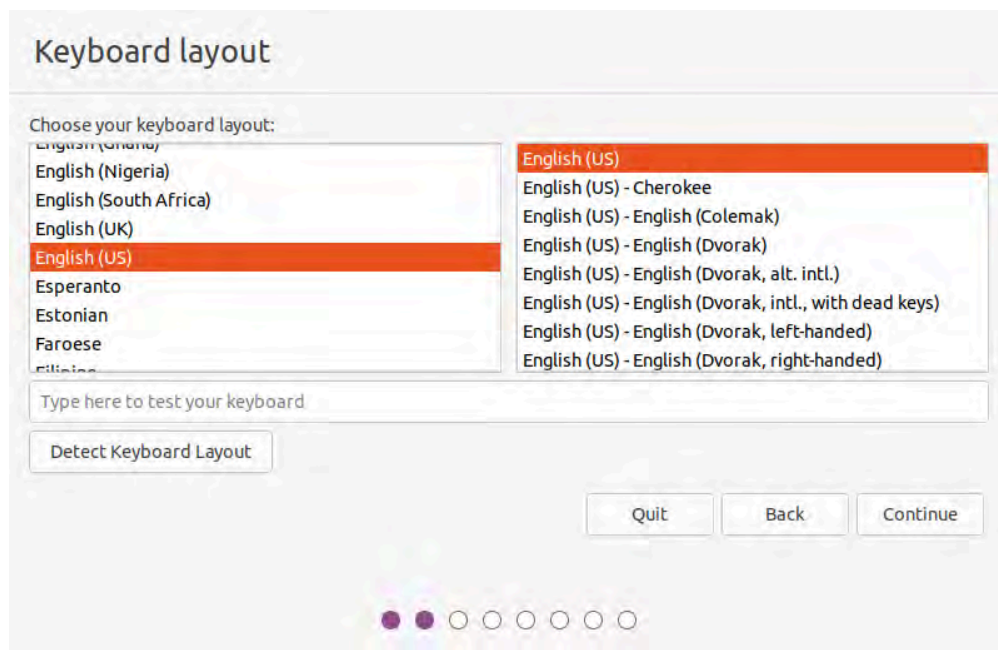


h

Select **Minimal installation**. Uncheck **Download updates while installing forgeos**. Then click **Continue**.

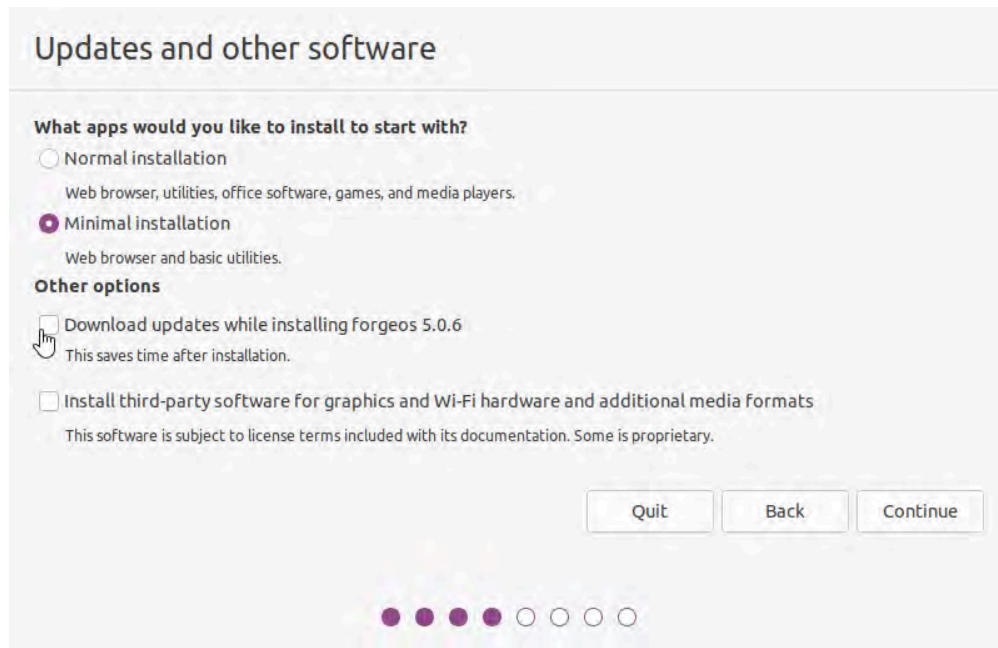
**i**

Select **Erase disk and install forgeos**. Then click **Continue**.

Note: If Forge/OS is already installed, the installation wizard will show additional options. The goal is to erase the entire disk for a brand new installation.

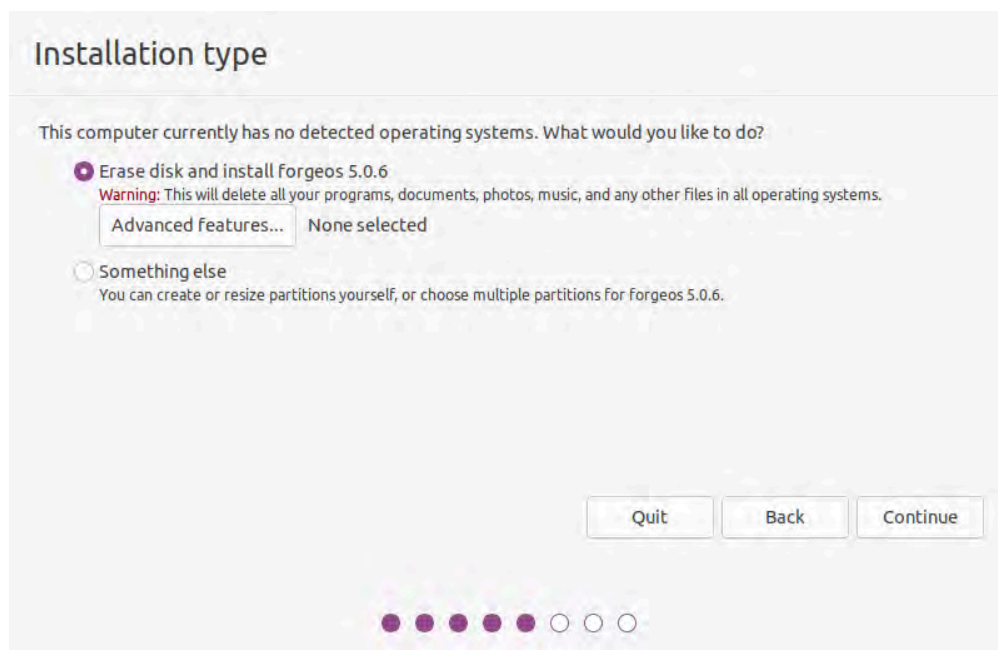


- j** Select the IPC hard drive for Forge/OS and click **Install Now**.

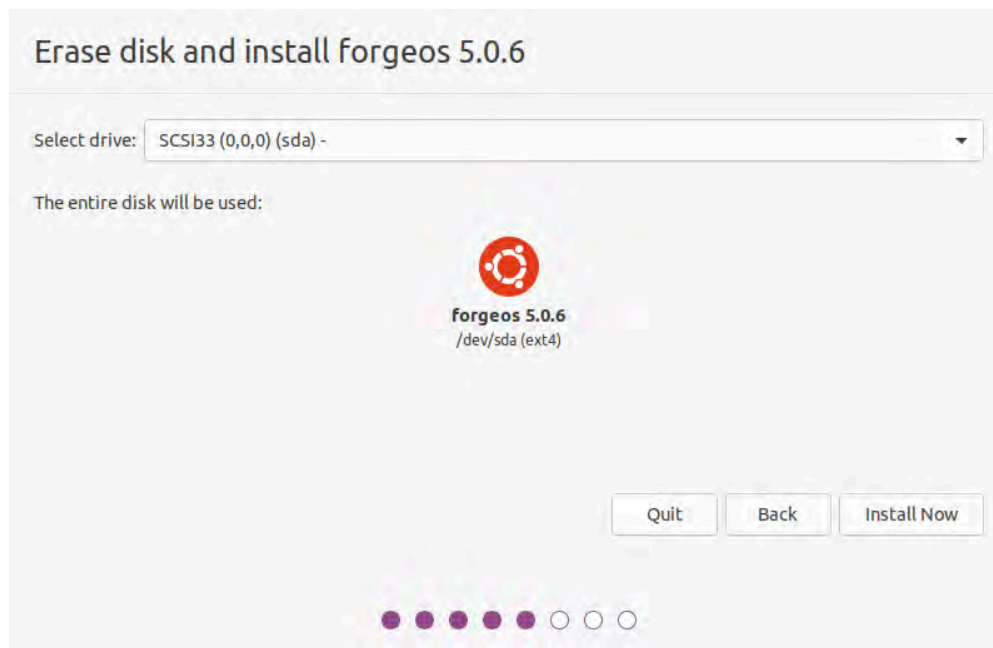


- k** Confirm that you want to erase the entire disk by clicking **Continue**.

- l** Make a note of the pendant instructions. If you're using a Forge/Ctrl, select the checkbox next to **This hardware is a Forge CTRL**.

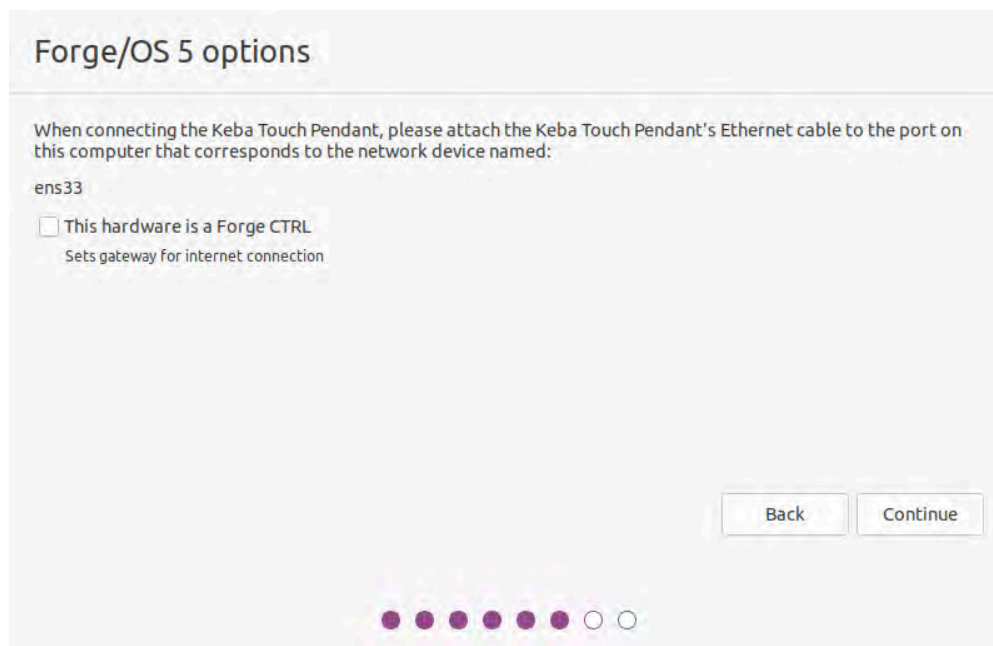

- m** Choose your timezone. Then click **Continue**.

Where are you?



New York

Back Continue

Progress indicator: 8 dots, 7th dot is active.

- n** Choose your IPC's host name. The host name identifies the IPC on the network. Pick a username and password. Then click **Continue**.

Note: The username and password that you create here are for accessing the IPC desktop. They are **NOT** for signing into Forge/OS on the **READY pendant**.

Who are you?

Your name: Forge User ✓

Your computer's name: YOUR-HOSTNAME ✓
The name it uses when it talks to other computers.

Pick a username: forge ✓

Choose a password: |


Confirm your password:

☐ Log in automatically
☒ Require my password to log in


Back Continue

Progress indicator: 8 dots, 8th dot is active.

- o Wait for the installer to copy and install Forge/OS.

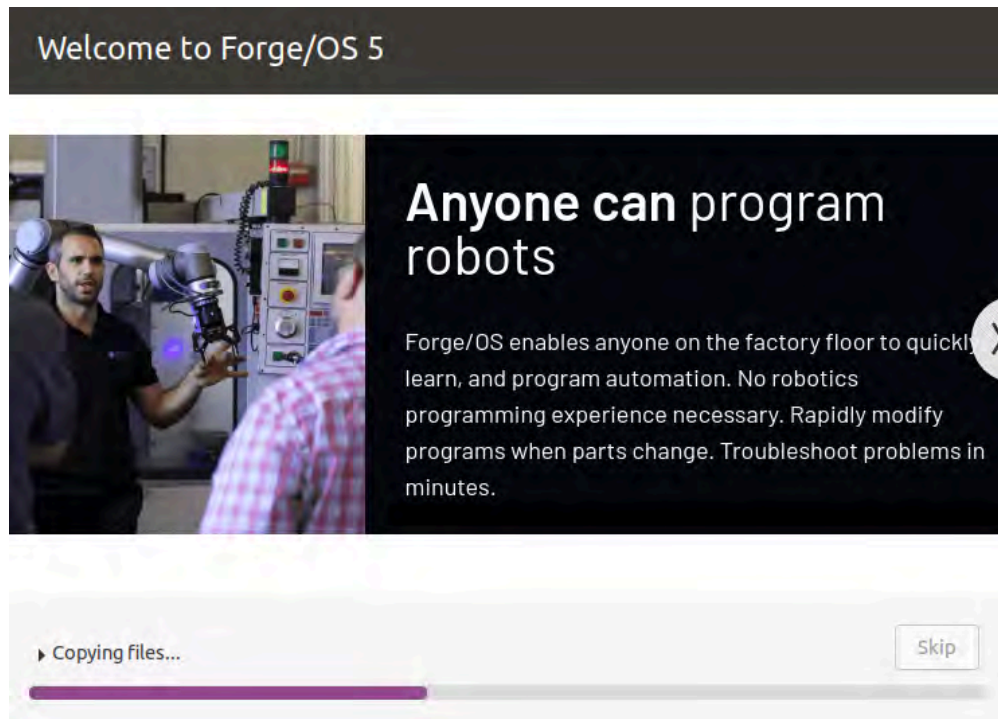

- p Once the installation completes, click **Restart Now**.

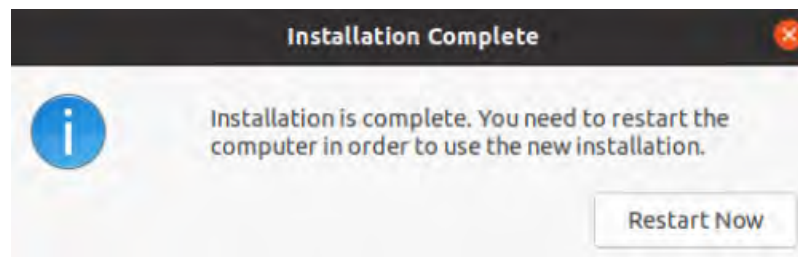


- q When prompted, remove the installation flash drive. Then reboot.

```
Please remove the installation medium, then reboot.  
_
```


- r Wait for Forge/OS to finish booting.

S

When you see the login screen with the Forge/OS 5 logo, Forge/OS is ready to run on the READY pendant! You don't need to sign in to the desktop. Disconnect the monitor, keyboard, and mouse that you used to install Forge/OS.

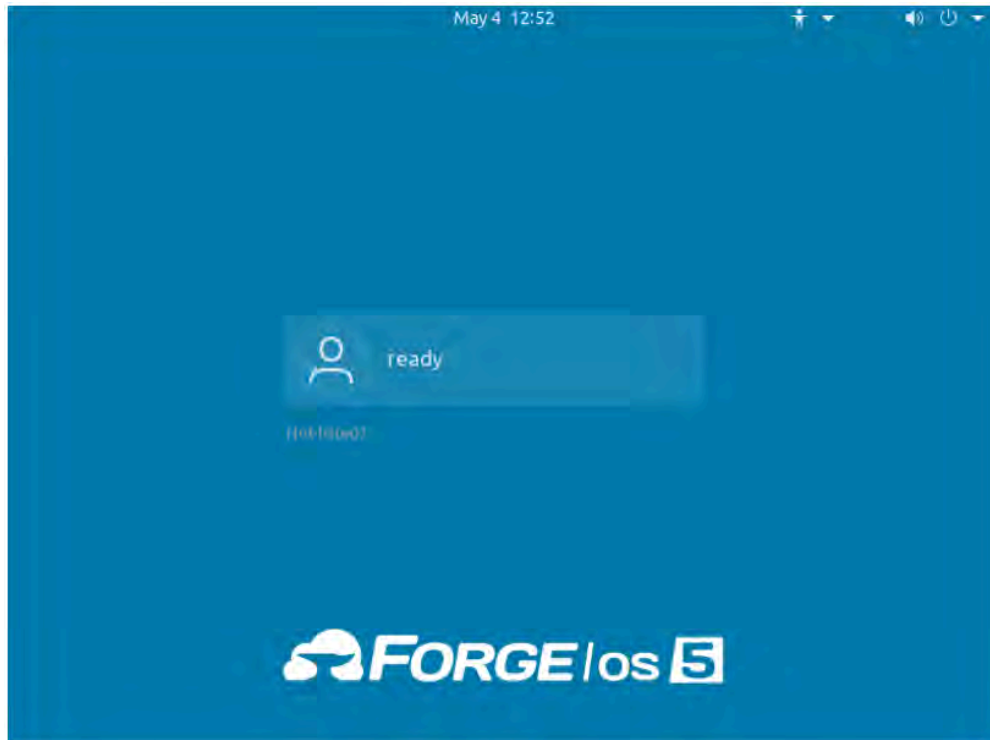
**2**

On the READY pendant, the Pendant Pairing screen appears. This is where you connect the pendant to Forge/OS each time you reboot. Tap the blue **PAIR PENDANT** button when it appears. It may take up to two minutes to appear.

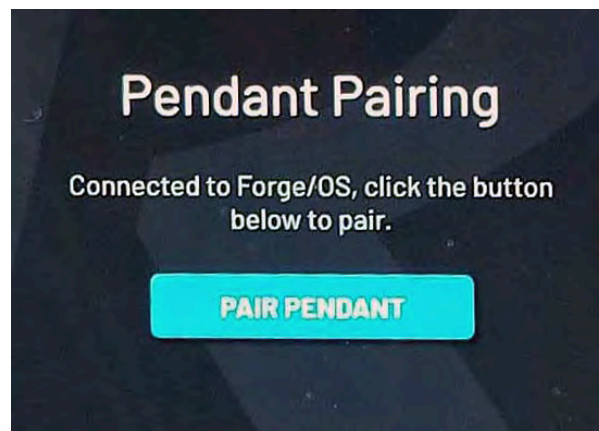

Note: If the pendant fails to pair or the **PAIR PENDANT** button is unavailable for longer than two minutes, check the Ethernet connection to the **IPC**. If the pendant still doesn't pair, connect the pendant's Ethernet cable to another LAN port on the **IPC**. The **READY pendant** IP Address is preset to 172.16.255.253. The network interface that the pendant connects to should use IP Address 172.16.255.250 and Subnet mask 255.255.255.0.

- 3 Tap **Admin** and sign in. The default Admin password is "forgeadmin".

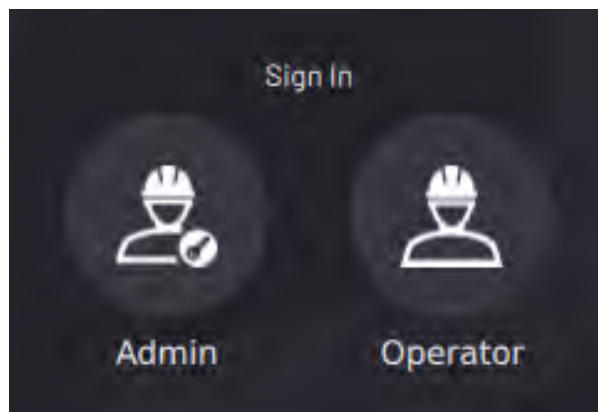

Note: After installation, you have limited access to Forge/OS until you activate it with a license code. See [Activating Forge/OS with a License Code](#).

ACTIVATING FORGE/OS WITH A LICENSE CODE


There are two methods to activate Forge/OS: **Online license activation** and **offline license activation**.

The table below lists the requirements for each method.

Online License Activation	Offline License Activation
<ul style="list-style-type: none"> An internet-connected Forge/OS A valid Forge/OS license code 	<ul style="list-style-type: none"> A 2GB or larger USB flash drive An internet-connected PC A valid Forge/OS license code


Tip: Connect a USB keyboard to the port on the bottom of the **READY pendant** to type in any text field in Forge/OS.

- 1 On the Settings app main screen, tap **License**.

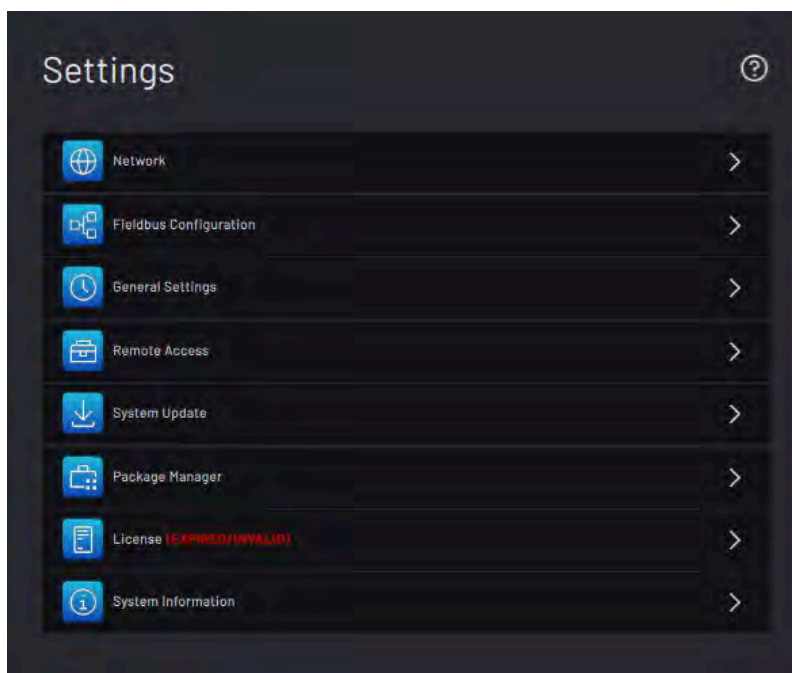

- 2 Type in your license code.


- 3 Choose **ONLINE LICENSE ACTIVATION** if Forge/OS is connected to the internet. If not, choose **OFFLINE LICENSE ACTIVATION**.

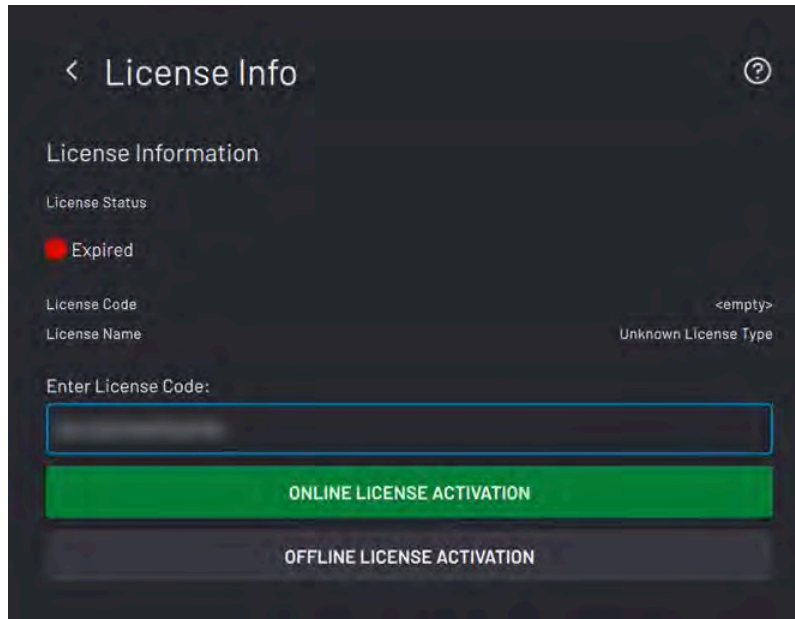


- 4 If you chose online license activation, you're done!

- 5 If you chose offline license activation, follow these substeps:


- a Insert the USB flash drive into your IPC. Tap **START WRITING CERTIFICATE TO USB DRIVE**.

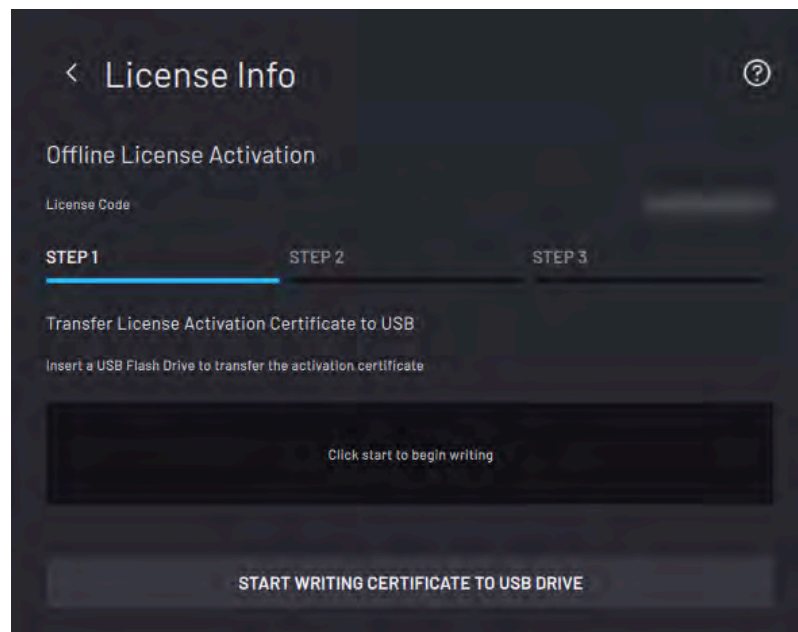

- b** When the files finish transferring, tap **NEXT**. Follow the instructions on the screen to convert the Activation Certificate to an Unlock Certificate using an internet-connected PC.

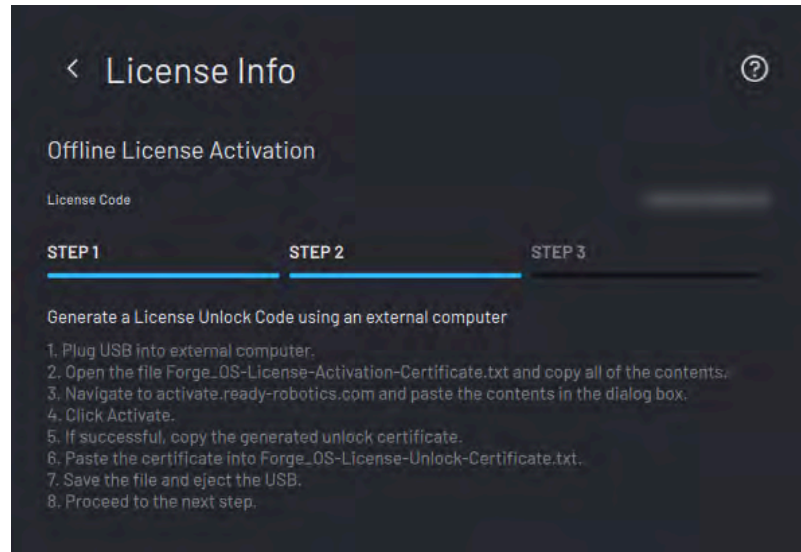

- c** Insert the USB flash drive back into your IPC. Tap **UNLOAD UNLOCK CERTIFICATE FROM USB DRIVE**.

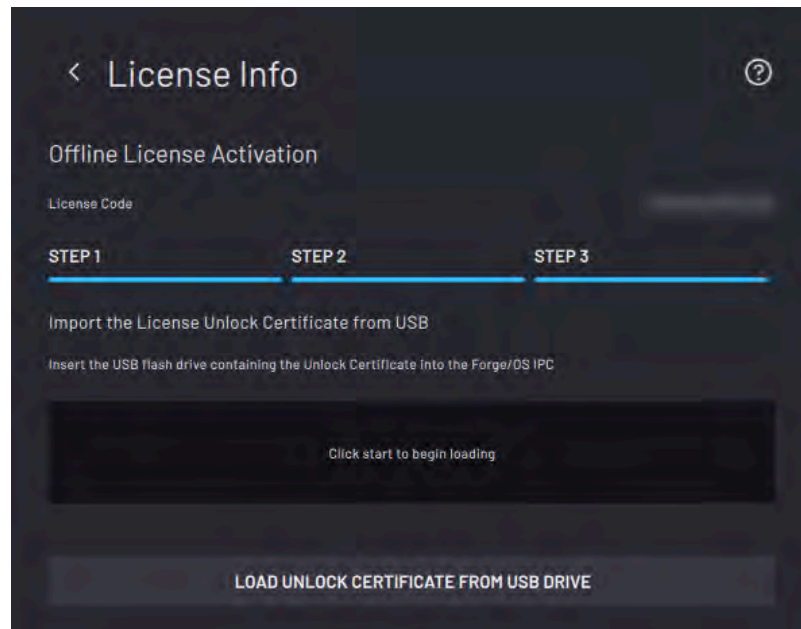

- d** Wait for the file to finish transferring. When the file transfer is complete, remove the USB flash drive and tap **SAVE**.

- e** Forge/OS returns to the licensing home screen and shows an active license. If the license status isn't active, restart these license activation steps. Double-check your license code.

CHOOSING PREFERENCES


These steps help you choose system preferences, including language, units, time, and network settings.

1 To change preferences for the first time, go to General Settings:

a On the Settings app main screen, tap **General Settings**.

b Change the Units of Measure, Time and Date settings, or the Admin login password.

Note: If you later forget your password, contact READY Robotics to reset it.

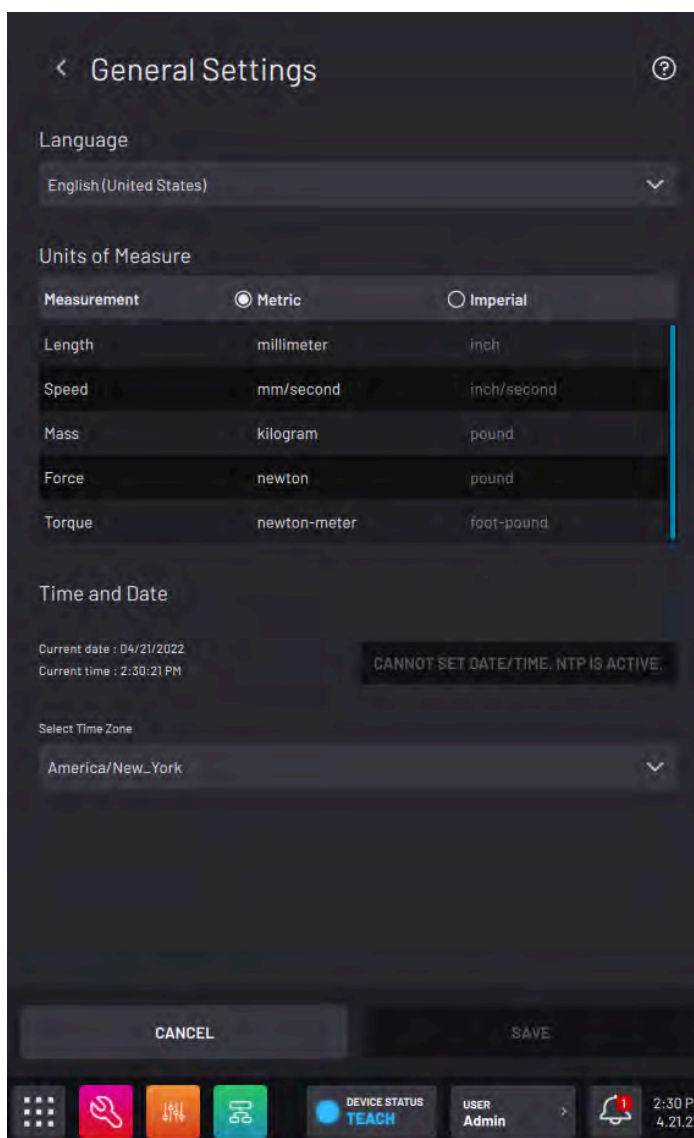


c Tap **SAVE** to save changes and exit the General Settings menu.


2 Check the Network settings in Forge/OS and set them as you want.

a On the Settings main screen, tap **Network**.

b The table below lists the available network interfaces on your IPC. By default, the first interface is for the READY pendant. You can't edit the pendant's interface in Forge/OS. Select another interface and tap **Edit** to see the network settings.

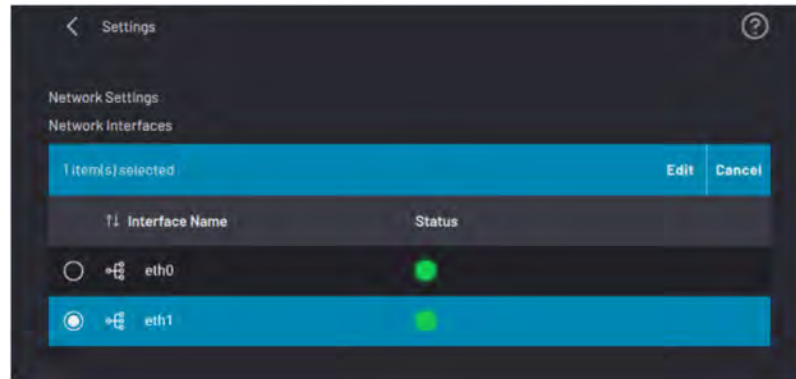

c Change the network interface to match the settings in the image below. Connect robots and other devices to this interface through an Ethernet switch.

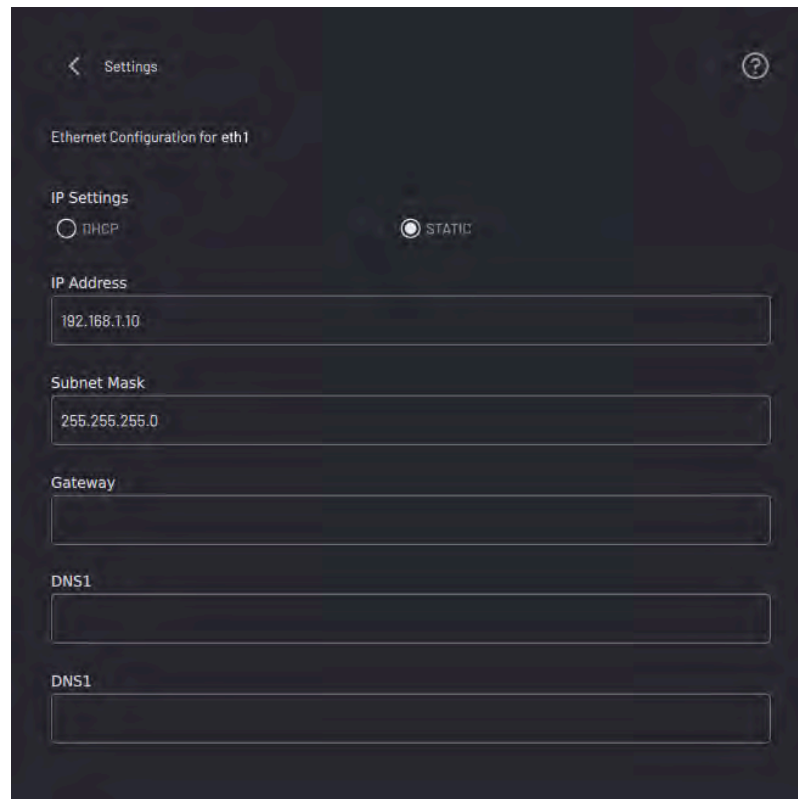

d Tap **SAVE**.

APPENDIX B: TOOL LOADING STEPS


Follow these steps to add new TCPs/Payloads in Forge/OS and update the configuration on the FANUC controller.

Here is an outline of the tool loading process:


- Add TCPs/Payloads to the robot's configuration in Forge/OS and save.
- Apply DCS parameters.
- Restart the FANUC controller.
- Confirm the Collaborative DCS settings (collaborative only).
- Reset the controller from Forge/OS.

1 In Forge/OS, go to the Device Configuration app and find the FANUC robot under Configured Devices. Select the device and tap **Edit** to open the robot configuration.

2 Tap **TCP AND PAYLOAD CONFIGURATION**.

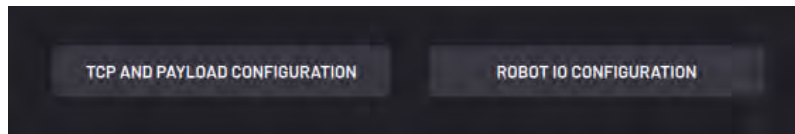

- 3 Add all the TCPs and Payloads you need for your workcell and tap **SAVE**.

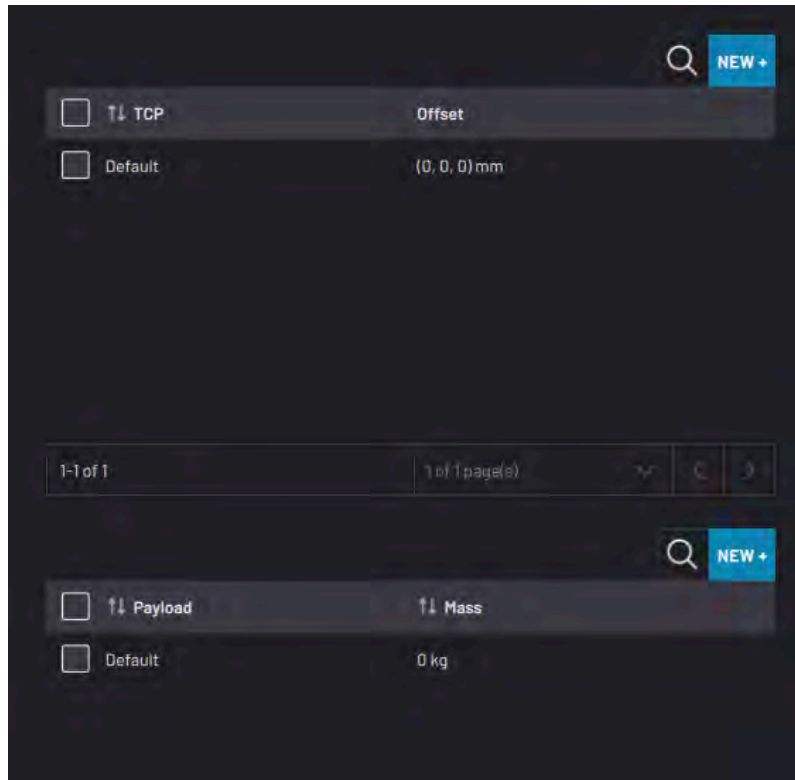

- 4 Tap **SAVE** to exit the robot configuration. Forge/OS uploads the tool data to the FANUC controller. Forge/OS shows an error for the robot: *FANUC Error SYST-212: DCS settings not applied.*

- 5 Install your end of arm tooling on the robot.

- 6 Apply changes to the FANUC DCS settings:

- a Go to the DCS screen by pressing the **MENU** button, **NEXT (0)**, **SYSTEM (6)**, then **DCS**.

*Tip: Or on the **SYSTEM** screen, press **[TYPE] (F1)**, then select **DCS**.*

- b Press **PREV** to ensure you are on the main DCS screen.

- c Press **APPLY (F2)** to confirm the settings. If you installed Forge/OS files onto the FANUC controller before, there may not be changes to apply.

- d Enter the password (default: **1111**). Confirm the settings by pressing **OK (F4)**.

7 For a **collaborative** robot, the controller will boot to the DCS **Collaborative robot** screen. Follow these sub-steps to confirm the collaborative DCS settings:

a Press **CONFIRM (F2)**.

b Enter the password (default: **1111**) and follow the prompts by answering **YES (F4)**.

8 On the READY pendant, tap the **Device Status** button to expand the Device Status Panel, then tap the **RESET** button on the list next to the robot. This clears the faults on the robot and gives you control of it.

RESOURCES

Want to learn more about how Forge/OS can empower you?

Visit **READY.academy** (ready.academy) for *FREE* hands-on courses to help you deploy a robotic system.

Visit **READY.market** (market.ready-robotics.com) for products and services offered by READY and our partners.

Visit our **Support** site (support.ready-robotics.com) for robot startup guides, FAQs, and more.

Visit our **Resources** page (ready-robotics.com/resources) for articles, whitepapers, and other resources.

If you encounter a problem and need to talk to someone, reach out to us.

- Email READY Robotics: support@ready-robotics.com
- Call READY Robotics: +1-833-732-3977

