



UR e-Series Startup Guide



The documentation, best practices, and recommendations provided by READY Robotics do NOT constitute safety advice. Products sold through READY Robotics are not by themselves a fully integrated workcell. As required in ISO 10218-2, READY Robotics strongly recommends performing a complete risk assessment of the integrated workcell per ISO 12100. You may wish to use the methodology found in the ANSI/RIA TR R15.306 Task-based Risk Assessment Methodology.

CONTENTS

- Overview 4
- Hardware Requirements 5
- Software Requirements 7
 - Confirming Software Requirements 8
- Connecting the UR Control Box 9
- Connecting the READY pendant 14
- Powering On 19
- Preparing Polyscope on an e-Series Robot 20
 - Enabling Remote Control on e-Series Robots 25
 - Clearing Operational Mode Password on e-Series Robots 27
- Signing In to Forge/OS 30
- Adding the e-Series Force Sensor in Device Configuration 32
- Adding the UR Robot in Device Configuration 35
- Appendix A: Setting Up Forge/OS 42
 - Installing Forge/OS 42
 - Activating Forge/OS with a License Code 51
 - Choosing Preferences 54
- Appendix B: Troubleshooting 55
- Resources 56

OVERVIEW

This document walks you through setting up your e-Series Universal Robot and Forge/OS 5.

You will complete the following steps:

1. Connect your IPC to the UR Control Box.
2. Connect your UR robot to the UR Control Box.
3. Connect the READY pendant to the UR Control Box.
4. Power on the system.
5. Install a supported Polyscope version and set the robot's IP address on the UR pendant.
6. Install and set up Forge/OS.
7. Add your robot in the Device Configuration app on the READY pendant.



Note: This document assumes that you have mounted your robot following UR guidelines. You can find their documentation at universal-robots.com/download/.

HARDWARE REQUIREMENTS

| Image | Part Name | Description | Vendor | Part Number |
|---|---|--|----------------|-------------|
|  | READY IPC | Hosts Forge/OS. <i>Note: READY offers two IPCs: Forge/Hub and Forge/Ctrl (legacy)</i> | READY Robotics | |
|  | READY pendant | The touch screen interface for Forge/OS. | READY Robotics | 112563 |
|  | READY pendant Junction Box (Forge/Ctrl only) | Connects the READY pendant to the Forge/Ctrl and robot controller. | READY Robotics | R-101257 |
|  | 12-Pin M12 to Flying Leads Cable | Connects to the READY pendant Junction Box or Forge/Hub to terminals. | READY Robotics | |

| Image | Part Name | Description | Vendor | Part Number |
|---|-----------------------------------|--|-------------------|-------------|
|  | UR Teach Pendant and Control Box | Powers and controls the robot (pendant required to up Forge/OS). | Universal Robots | - |
|  | UR Control Box Key | Opens the UR Control Box. | Universal Robots | - |
|  | Cat5e Bulkhead Ethernet Connector | Attaches at the base of the UR Control Box to connect two Ethernet cables. | Mouser | 1546413-3 |
|  | Cat5e STP Ethernet Cable (x3) | <ul style="list-style-type: none"> ▪ Routes from the internals of the UR Control Box to the Cat5e Bulkhead Ethernet Connector. ▪ Routes from the Cat5e Bulkhead Ethernet Connector to the IPC. ▪ Connects the READY pendant to the IPC. | | |
|  | Ethernet Bulkhead Dust Cover | Protects the Cat5 Bulkheads Ethernet Connector when the outside Ethernet Cable is not plugged in. | Mouser | 1-1546406-1 |
|  | Cable Gland | Provides strain relief for safety cabling going into the UR Control Box | Automation Direct | BSPAX-11-W |

SOFTWARE REQUIREMENTS

The native UR software that runs on the UR Teach pendant is called **Polyscope**. Refer to the table below for the Polyscope version requirement.

| Controller | Minimum Software Version |
|-----------------------|--------------------------|
| e-Series (all robots) | 5.9.4 |

Important: If the robot controller is not running the minimum supported Polyscope version, it will not communicate with Forge/OS.


CONFIRMING SOFTWARE REQUIREMENTS

Follow these steps to check the software version on a UR robot controller.

- 1 Power on your UR controller.
- 2 On the UR teach pendant, go to the **About** page.



CB-Series: About Button (on Home Screen)

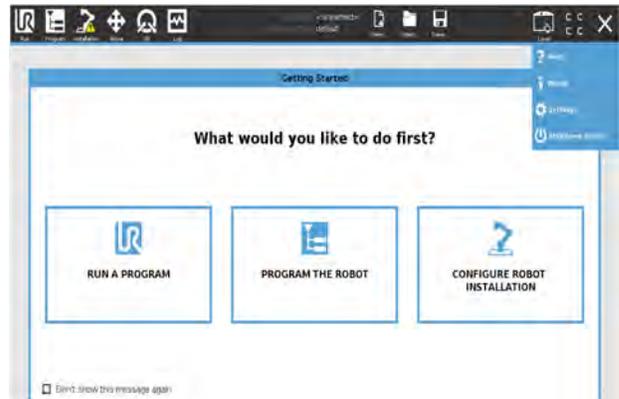

e-Series: About Button (in Hamburger Menu)

- 3 In the **Version** tab, look for the **Universal Robots Software** version.



CB-Series: Version Tab




e-Series: Version Tab


- 4 If your UR software is older than the requirement, download an update at Universal Robots Support site: www.universal-robots.com/articles/ur/documentation/all-legacy-download-center.

CONNECTING THE UR CONTROL BOX


- 1 Open the UR Control Box by inserting the controller key and turning it clockwise.

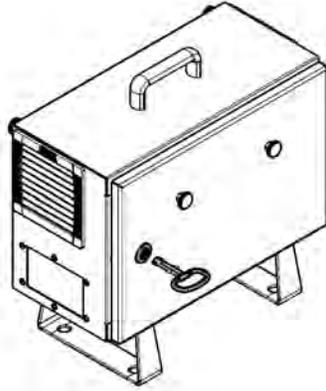


- 2 Remove the nut on the Cat5 Bulkhead Ethernet Connector.

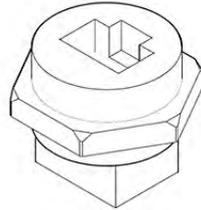


- 3 Place the Dust Cover's loop over the connector and seat it against the gasket.

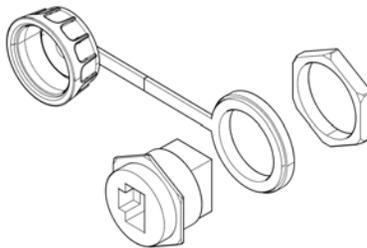


- 4 At the bottom of the UR Control Box, remove one of the rubber plugs or metal knockouts.

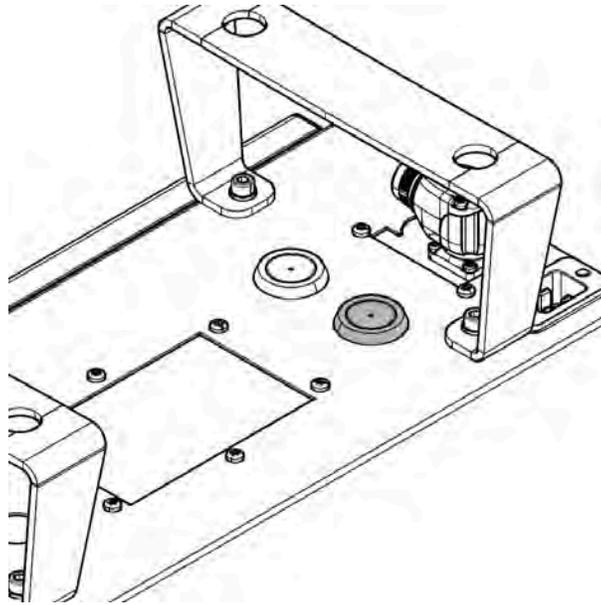

- 5 Insert the silver side of the Ethernet Connector into the hole.

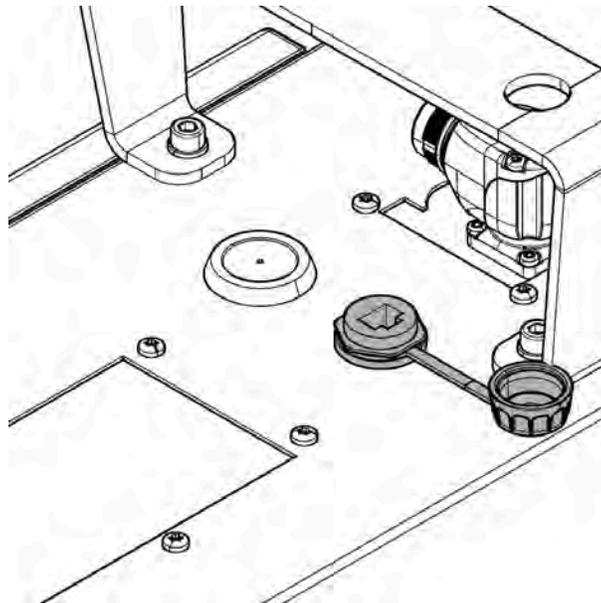


- 6 Find the nut that you removed from the Ethernet Connector. Screw the nut onto the Connector until it is hand-tight against the Control Box wall.

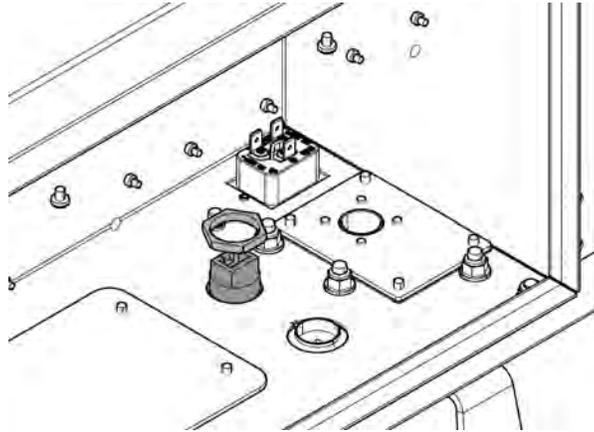


- 7 Plug the shorter Ethernet cable into the Ethernet Connector.

- 8 Plug the other end of the cable into the Ethernet port in the UR controller.

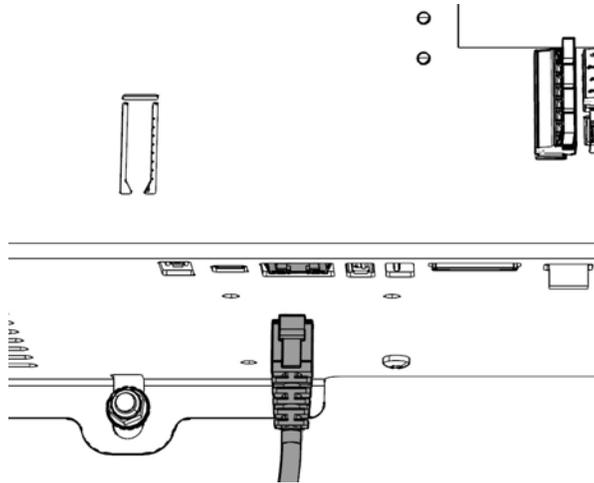


- 9 Plug one end of the longer Ethernet cable into the outside end of the Ethernet Connector.

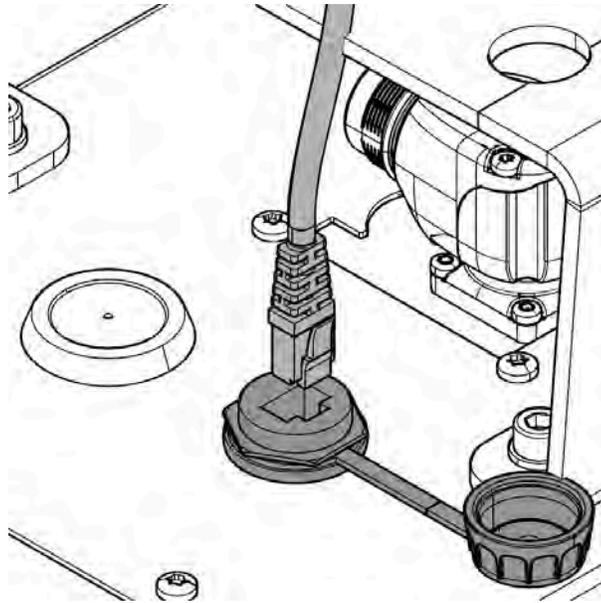


10 Plug the other end of the Ethernet cable into a **LAN** port on your IPC.

11 Plug the robot's cable connector into the metal socket at the base of the UR Control Box. Push the cable against the socket and turning the collar clockwise.

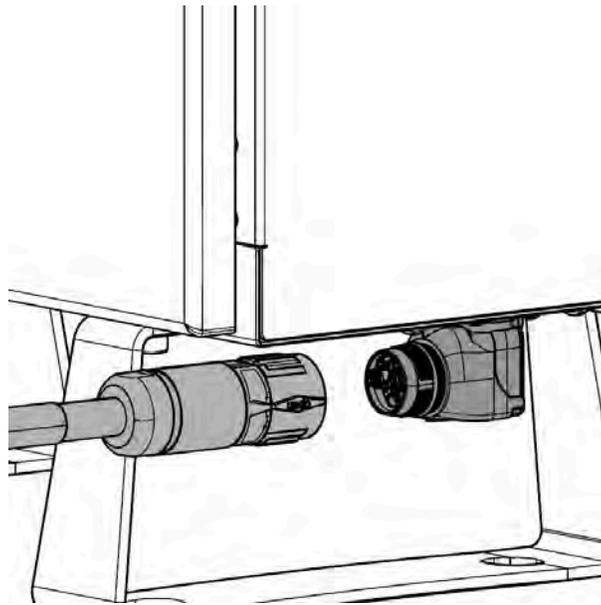

- 12 Plug the UR control box power cable into the port at the base of the UR Control Box. Do not plug the controller into a power source yet.

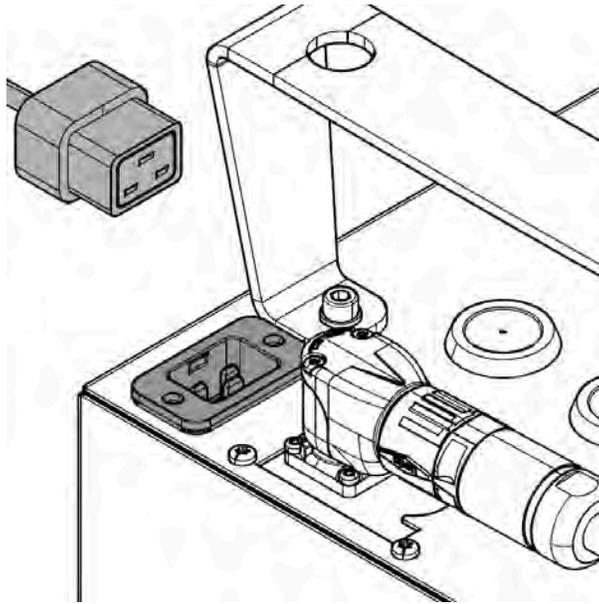

CONNECTING THE READY PENDANT

The READY pendant includes these safety outputs:

1. Key Switch (Robot Operation Mode)
2. Three-Position Enabling Switch
3. Emergency Stop Button



Note: You'll connect the **READY pendant** Emergency Stop to the UR controller. The UR robot won't use the **READY pendant** key selector switch or the three-position enabling switch. You can connect the three-position enabling switch if you configure Polyscope to use an enabling device.



Electric Shock Warning: Disconnect all components from power sources before attempting this installation.

1 If you are using a Forge/Ctrl, prepare the READY pendant Junction Box:



- a Connect a Cat5e STP Ethernet cable from the junction box Ethernet port (1) into a **LAN** port (5) on the Forge/Ctrl.


- b Connect the 8-Pin power cable (4) from the junction box into one of the **Module** ports (6) on the Forge/Ctrl.

- c Connect the 12-Pin flying leads cable to the safety port (3) on the junction box.


2 If you are using a Forge/Hub, connect the 12-Pin flying leads cable to the **Safety** port on the Forge/Hub.



- 3 Open the UR Control Box by inserting the controller key and turning it clockwise.

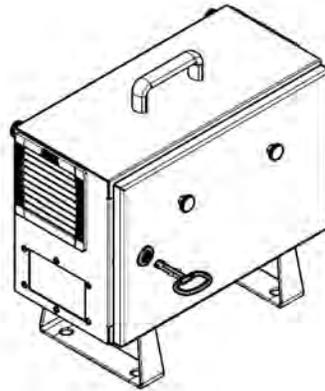


- 4 Remove an unused knockout on the bottom of the UR Control Box.

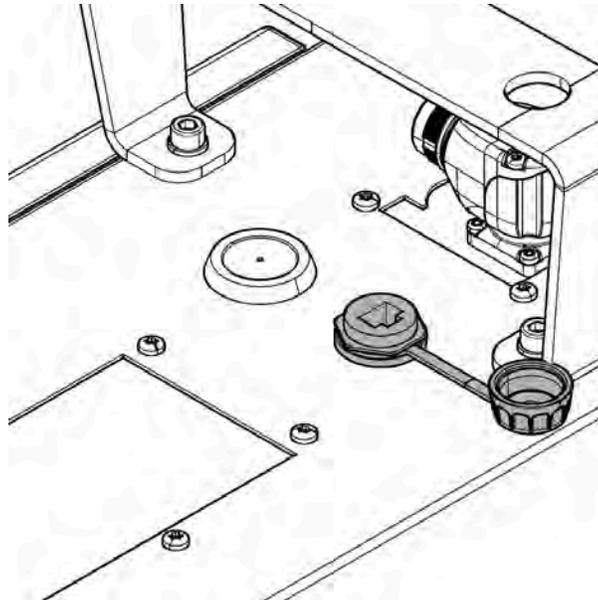


- 5 Insert a cable gland into the hole. Guide the 12-Pin M12 cable that is attached to the READY device (e.g., a READY pendant Junction Box or Forge/Hub) through the gland.

Note: This cable gland maintains the IP rating and provides strain relief to the 12-Pin M12 Cable.

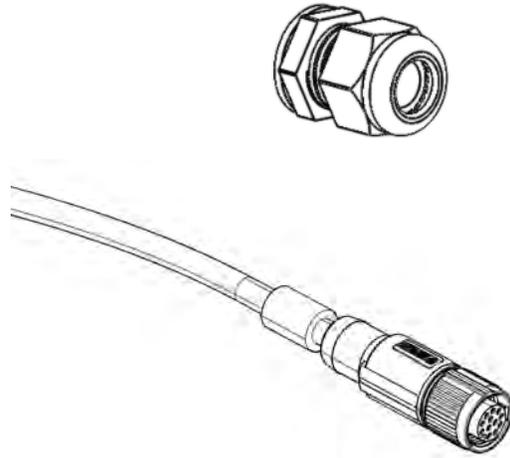

- 6 Wire the 12-Pin M12 cable flying leads to the UR Control Box's terminal blocks. Follow the diagram and table below.

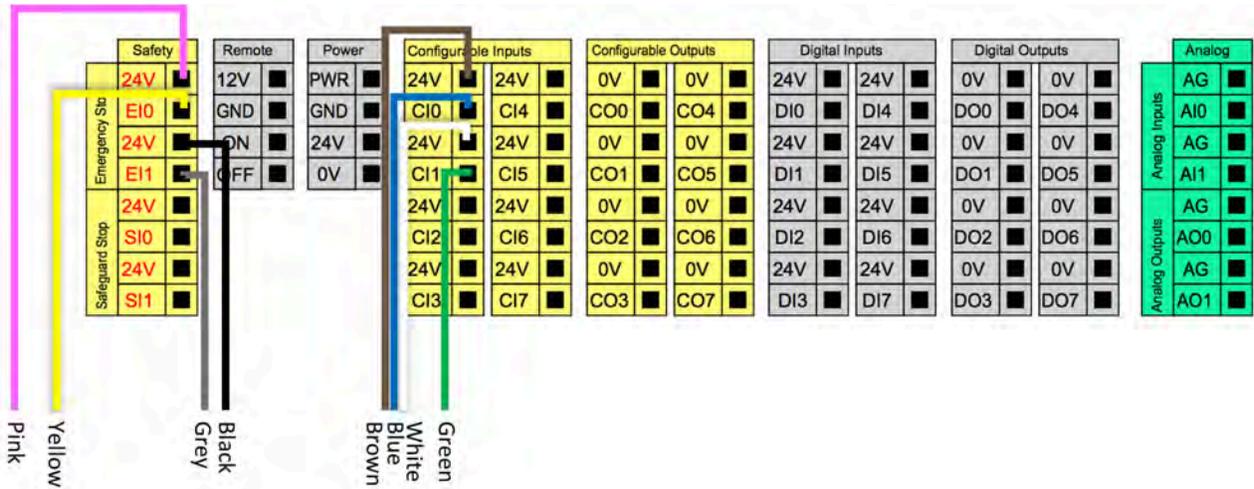


| 12-Pin Cable | Safety Block | Configurable Input Block | Function |
|--------------|--------------|--------------------------|---------------------------|
| Brown | | (Optional) 24V | Enabling Switch Circuit 1 |
| Blue | | (Optional) C10 | Enabling Switch Circuit 1 |
| White | | (Optional) 24V | Enabling Switch Circuit 2 |
| Green | | (Optional) C11 | Enabling Switch Circuit 2 |
| Pink | 24V | | Emergency Stop Circuit 1 |
| Yellow | E10 | | Emergency Stop Circuit 1 |
| Black | 24V | | Emergency Stop Circuit 2 |
| Gray | E11 | | Emergency Stop Circuit 2 |
| Red | N/A | N/A | Key Switch Circuit 1 (NC) |
| Violet | N/A | N/A | Key Switch Circuit 1 (NC) |
| Gray/Pink | N/A | N/A | Key Switch Circuit 2 (NC) |
| Red/Blue | N/A | N/A | Key Switch Circuit 2 (NC) |

Note: Leave the Safeguard Stop terminals jumpered if you're not using them. Make sure the **S10** terminal is jumpered to the **24V** terminal above it and that the **S11** terminal is jumpered to the **24V** terminal above it.

7

Close the UR Control Box and turn the key counterclockwise to lock the door shut.

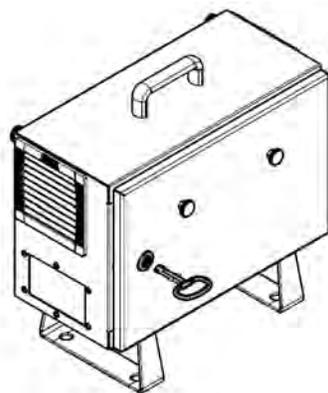

POWERING ON

- 1 Plug your IPC's power cable into a power outlet.
- 2 Plug the UR Control box's power cable into a power source.
- 3 Power on your IPC.

Note: If you are using a Forge/Ctrl, turn the Power Disconnect Switch to **ON**. Then press the green power button on the opposite side.

- 4 Press the power button on the UR Teach pendant to turn it on. The power button turns green.




PREPARING POLYSCOPE ON AN E-SERIES ROBOT

- 1 Move the UR robot to a safe position close to the base of the robot. This reduces the chance of the robot faulting during the initialization process.


Note: Remove the end effector to position the robot without causing a protective stop. After setting the default payload and TCP, re-attach the end effector, then initialize the robot arm.

Note: If you don't know how to move the UR robot with the UR pendant, refer to UR documentation.

- 2 Tap **CONFIGURE ROBOT INSTALLATION**, or go to the **Installation** tab.

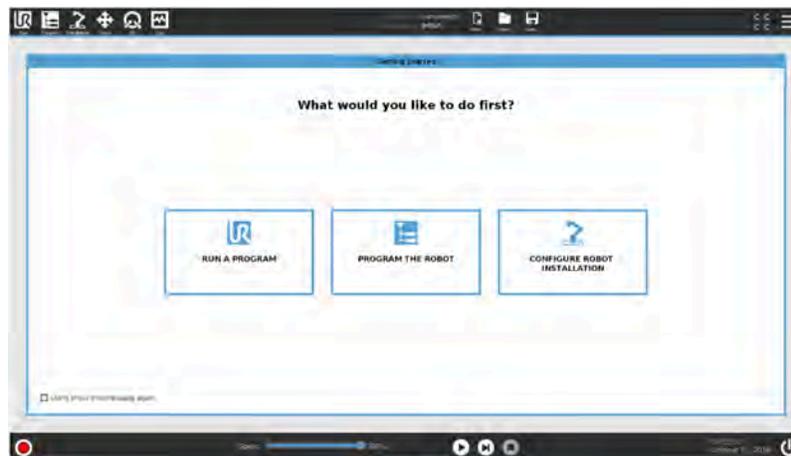

3 Add the installation Tool Center Point (TCP), payload, and center of gravity.

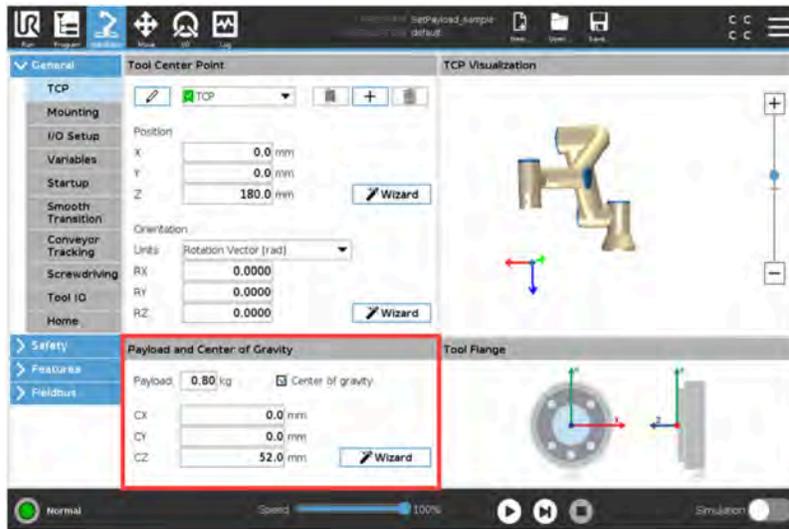

Note: The TCP is where the end effector interacts with the rest of the workcell.


Note: The payload is the amount of weight attached to the end of the robot. Make sure that you account for the weight of your end effector and the weight of any parts that it will grab.

4 Start the robot to initialize the robot installation configuration:

a Tap the status dot in the lower-left corner to open the Initialize screen.




b Tap **ON** to turn the robot on.

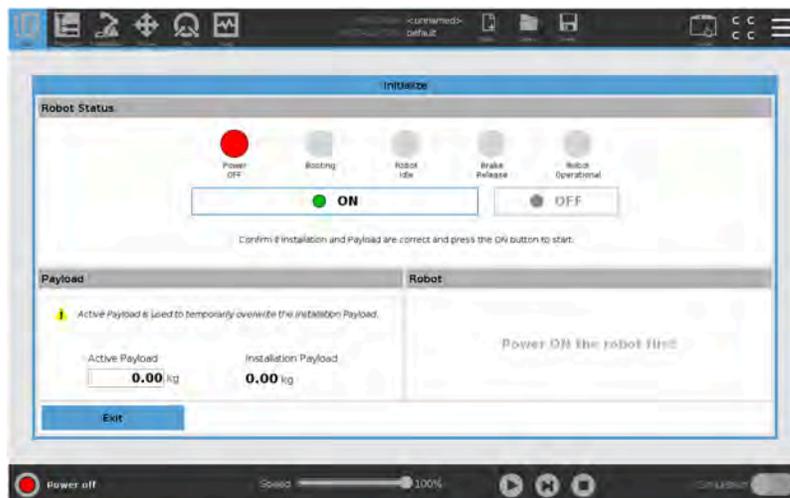


c Tap **START** to release the brakes.

Note: Make sure the robot arm is not touching an object (e.g., a table). A collision between the robot arm and an obstacle might damage a joint gearbox.

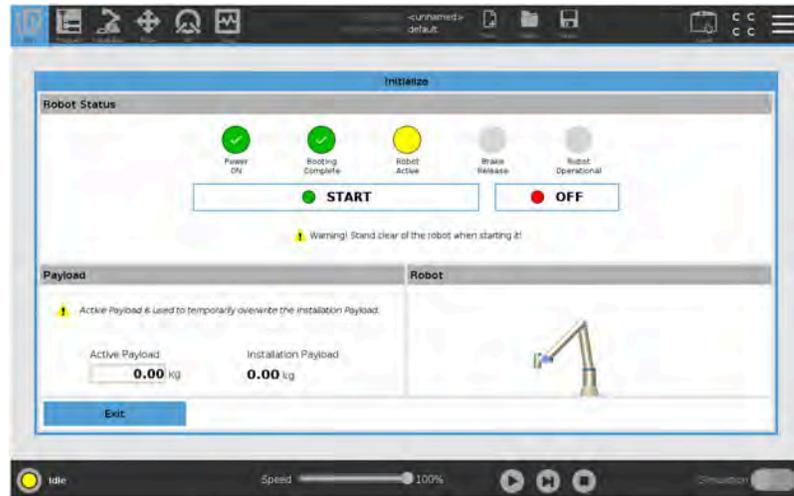


d Press **Exit** in the lower-left corner to close the Initialize screen.

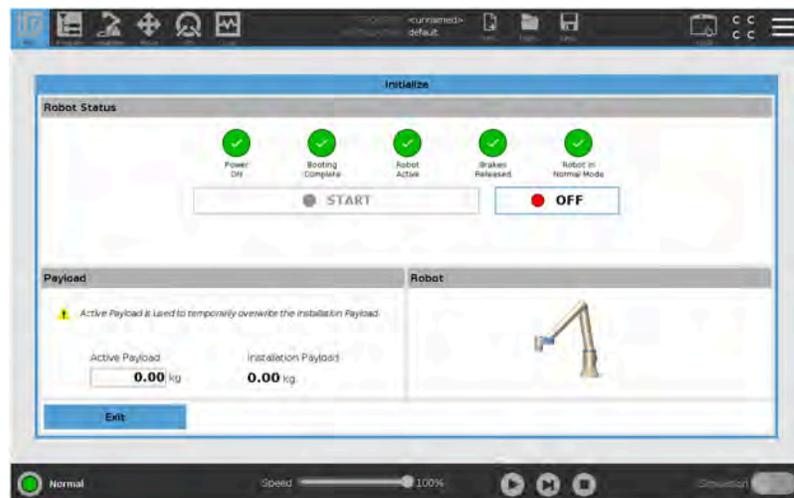


- 5 Make sure the UR pendant is in **Local** mode. If you don't see "Local" in the upper right corner, tap the mode selector and select Local.


Note: If you do not see a Local/Remote toggle, you are in Local mode. You have not enabled remote control yet.

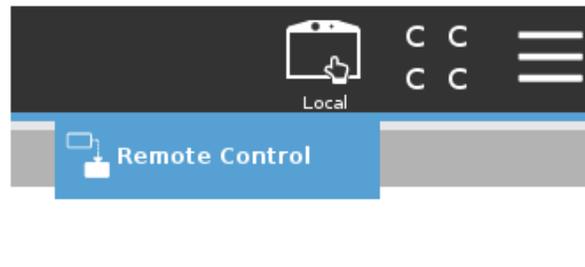

- 6 Navigate to the UR network settings.

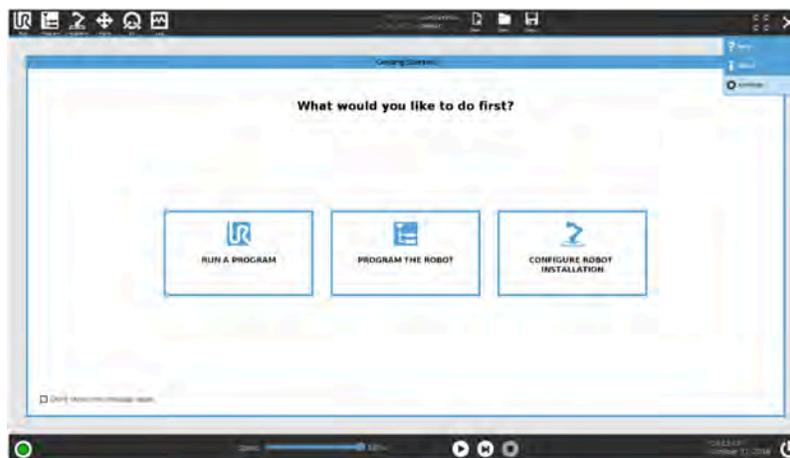

- a Tap the hamburger menu button in the upper right corner.
- b Tap **Settings**.
- c In the left sidebar, expand the **System** options and select **Network**.

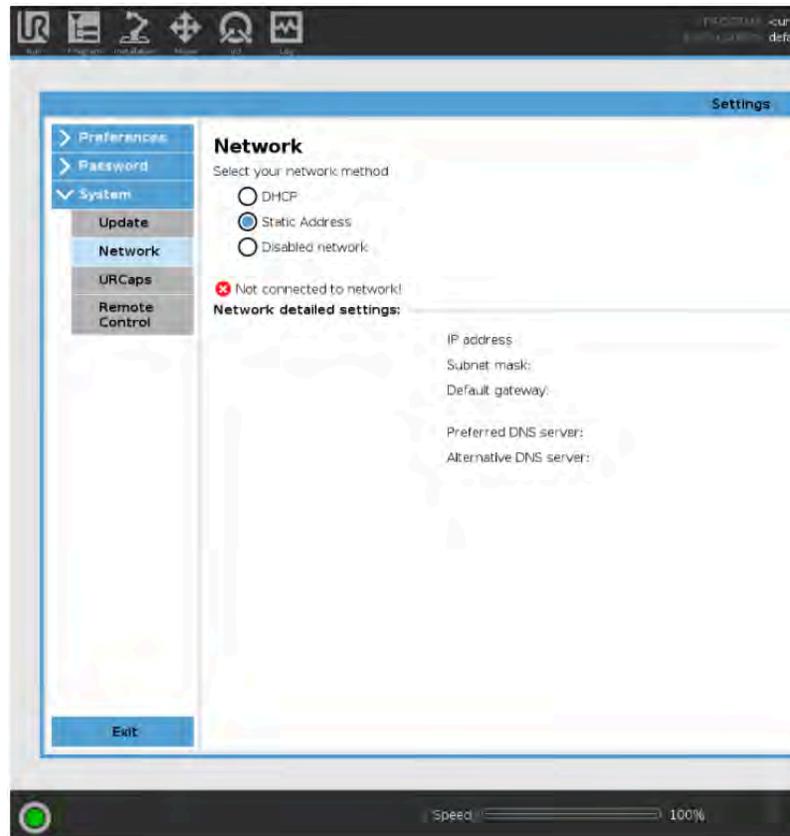7 Select **Static Address**.

8 Tap the boxes to enter the network settings:

- a** Set the IP Address and Subnet Mask according to the READY IPC you have:
- *Forge/Ctrl*: set the **IP Address** to **172.16.255.251** and set the **Subnet Mask** to **255.255.255.0**.
 - *Forge/Hub*: set the **IP Address** to **192.168.1.20** and set the **Subnet Mask** to **255.255.255.0**.

9 Tap **Apply**.

10 Tap **Exit** to leave the Settings screen.

11 Switch the UR pendant to **Remote** mode.


Tip: If you don't see the local/remote toggle, enable Remote Control by following the steps in **Enabling Remote Control on e-Series Robots**.

ENABLING REMOTE CONTROL ON E-SERIES ROBOTS


On the e-Series Universal Robots Teach pendant, look for the **Remote/Local toggle button** in the top-right corner. If you don't see the local/remote toggle, follow these instructions.

1 Tap the **hamburger menu** (three horizontal lines) in the top-right corner.


2 Tap the **Settings** option.

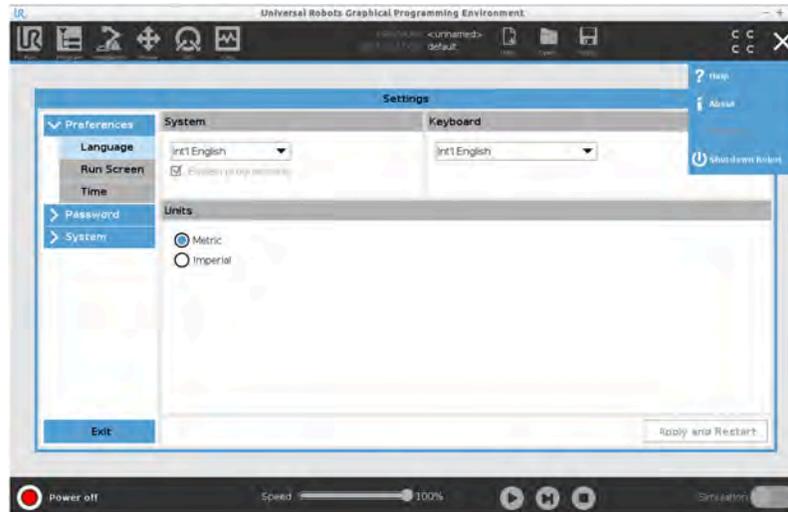

3 Expand the **System** option in the left column. Tap **Remote Control**.

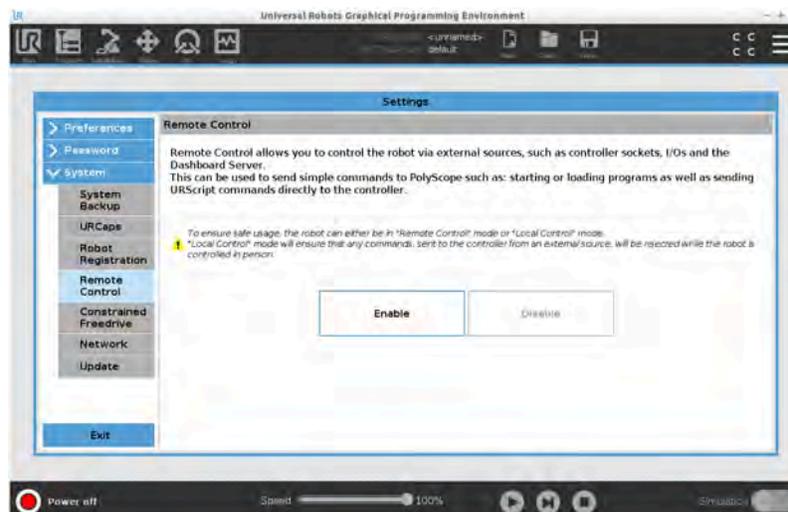

- 4 Tap **Enable**. Then tap **Exit**.

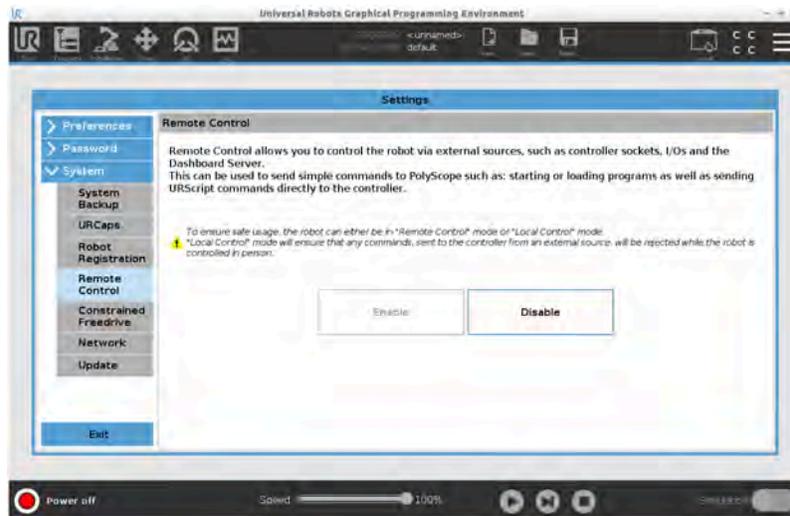

- 5 If the robot is not in **Remote Control**, tap the **Local Control** button on the top-right and select **Remote Control**.

CLEARING OPERATIONAL MODE PASSWORD ON E-SERIES ROBOTS


Setting an operational mode password prevents unauthorized modifications to the robot setup. It creates two extra modes: Automatic and Manual. Manual mode requires the operational mode password to create and load programs or installations.

Unless you are using **Configurable I/O** to set the **Operational Mode**, you must clear the **Operational Mode Password**. Use these instructions to clear the **Operational Mode Password**.

Important: If you do not clear the Operational Mode Password, you will not be able to use your UR robot with Forge/OS.

1 Put the UR pendant in **Local** mode. If you don't see "Local" in the upper right corner, tap the mode selector and select Local.

a Once in Local mode, see what options appear in the blue pop-up menu. If you only see an option to switch to Remote Control, then you do **NOT** have an operational mode password to clear.

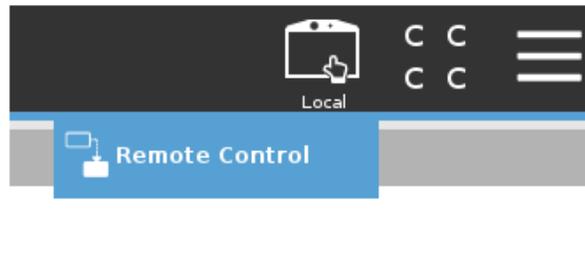


b If you see options for changing between Automatic, Manual, and Remote Control modes, then you **DO** have an operational mode password to clear.



2 Tap the hamburger **Menu** icon (three horizontal lines) in the top-right corner.

3 Tap **Settings**.

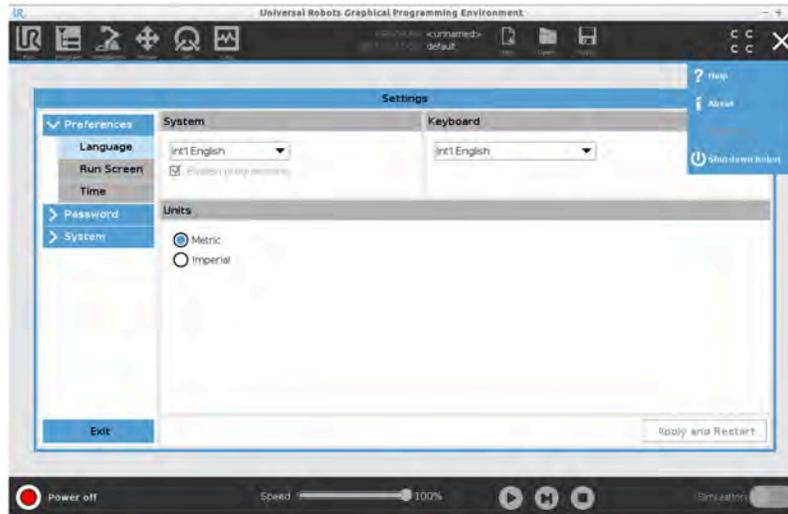


4 Expand the **Password** option in the left column and tap on **Mode**.


5 Clear the **Operational Mode Password**.

a If there is no set password, the **Current Password** field is grayed out. In this case, tap **Exit**.

Note: Even if the Current password field is blank, you may have to clear the password. A grayed out **Current password** field in Local Mode indicates that there is no set password.

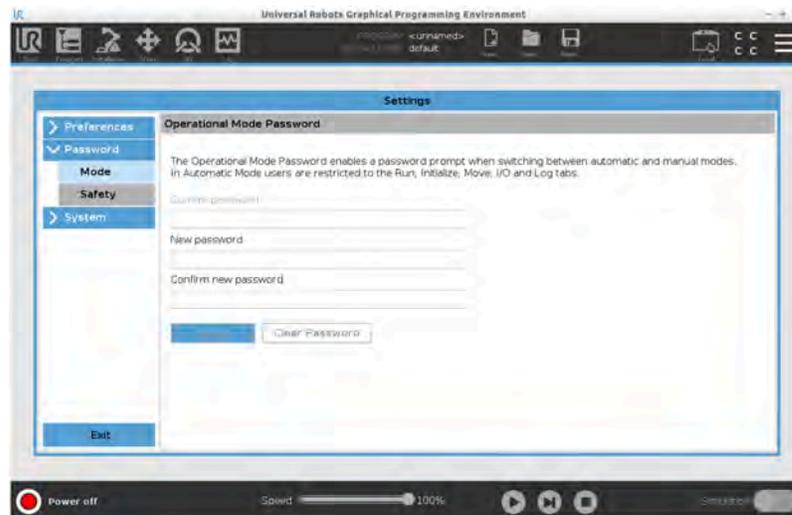

- b** If there is a set password, the Current Password field is available to type in. Enter the current password and tap **Clear Password**. Then tap **Exit**.

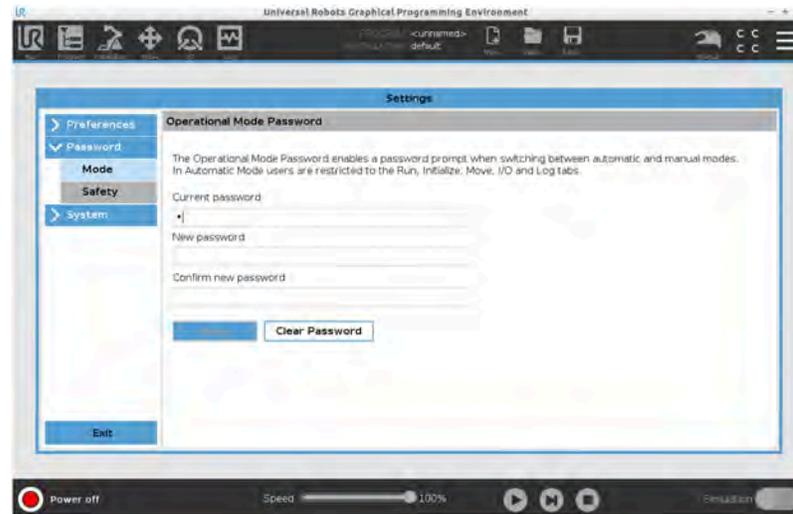

- 6** Switch the robot to **Remote Control** mode. Tap the **Local Control** button in the top-right corner and select **Remote Control**.

Important: Remote Control is required for the **READY pendant** to communicate with the robot in the following sections.

SIGNING IN TO FORGE/OS

Follow these steps to pair the READY pendant with the IPC and sign in to Forge/OS 5.


- 1 If you need to install Forge/OS 5 on your IPC, stop here and follow all the steps in [Appendix A](#), then come back to these steps.

Tip: Forge/OS 5 is installed on all Forge/Ctrls and Forge/Hubs shipped after June 1, 2021.

- 2 The READY pendant automatically finds and pairs with the IPC. The three LEDs on the screen help you track the status:

- **Pendant Network Connection:** This condition is satisfied when the READY pendant has a valid network connection (i.e., the Ethernet cable is plugged in).
- **Forge/OS IPC Detected:** This condition is satisfied when the READY pendant detects a Forge/OS IPC on the network.
- **Forge/OS IPC Paired:** This condition is satisfied when the READY pendant successfully pairs with the IPC. If pairing fails, it is automatically retried indefinitely.

When a condition is not satisfied, the LED is red. When a condition is in progress of becoming satisfied, a spinner around a READY logo appears to the right of the text. When a condition becomes satisfied, the LED turns green.

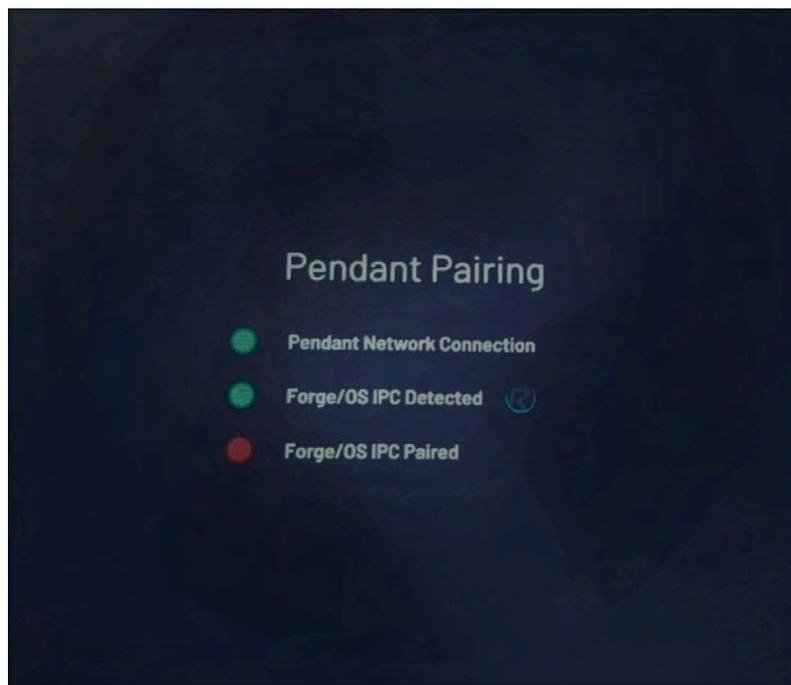


The UI shows the real-time state of each step. For example, if the pendant loses its network connection during


pairing, all steps become undone.

If the READY pendant spends more than 60 seconds on any step, troubleshooting text displays. Common things to check are if the READY pendant network cable is plugged in, if the IPC is powered on, if the READY pendant and IPC are connected to the same network, and if there's only one READY pendant and one IPC on that network.

3 Tap **Admin** and sign in. The default Admin password is "forgeadmin".

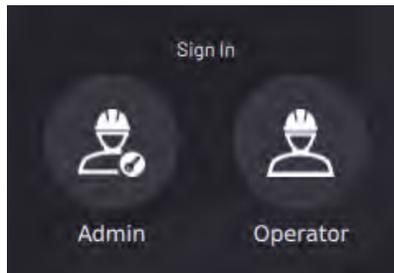

4 If Forge/OS is inactive, it opens the Settings app and prevents you from opening other apps. If you see the screen below, follow [Activating Forge/OS with a License Code](#) in Appendix A.

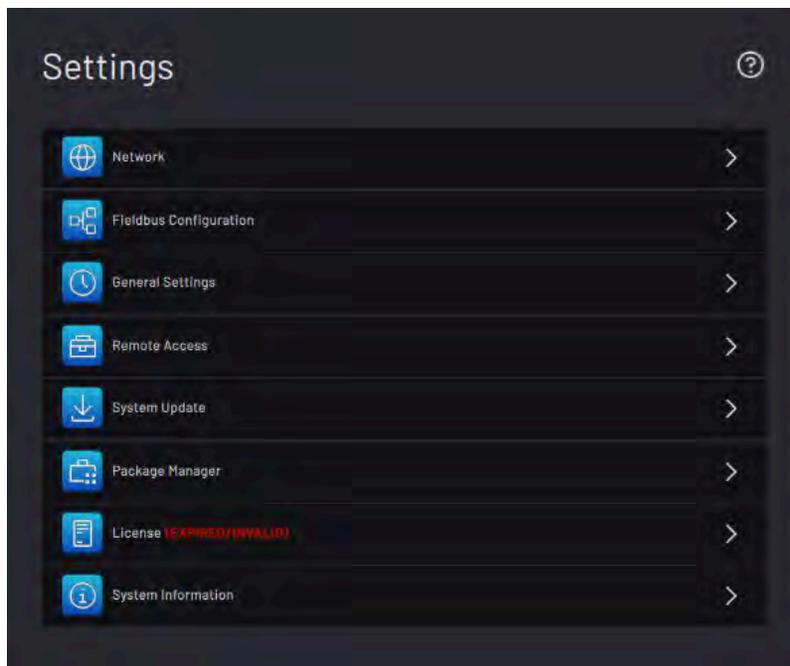


5 With Forge/OS active, move on to the next section.


ADDING THE E-SERIES FORCE SENSOR IN DEVICE CONFIGURATION

UR e-Series robots include an integrated force sensor. In this section, you set up an e-Series force sensor in Device Configuration. In the next section, you attach this configured sensor to the UR robot in Forge/OS.


- 1 In the **Admin** role, open the **Device Configuration** app.

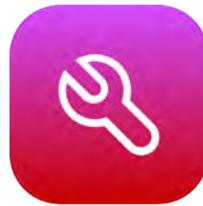


- 2 Tap **New +** to open the Device Library.

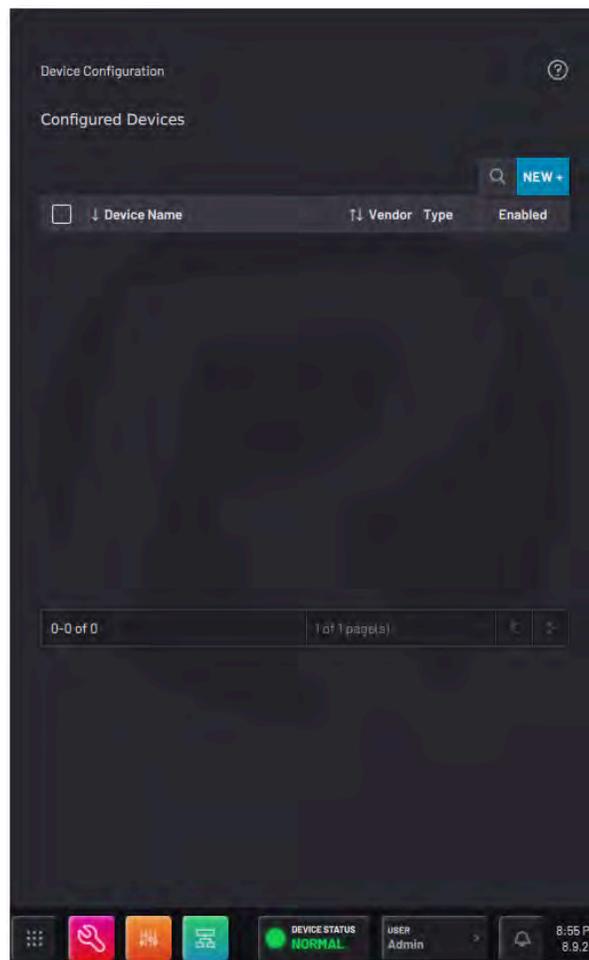


3 In the Device Library list, select **Universal Robots e-Series Integrated Force Sensor**. Then tap **NEXT**.

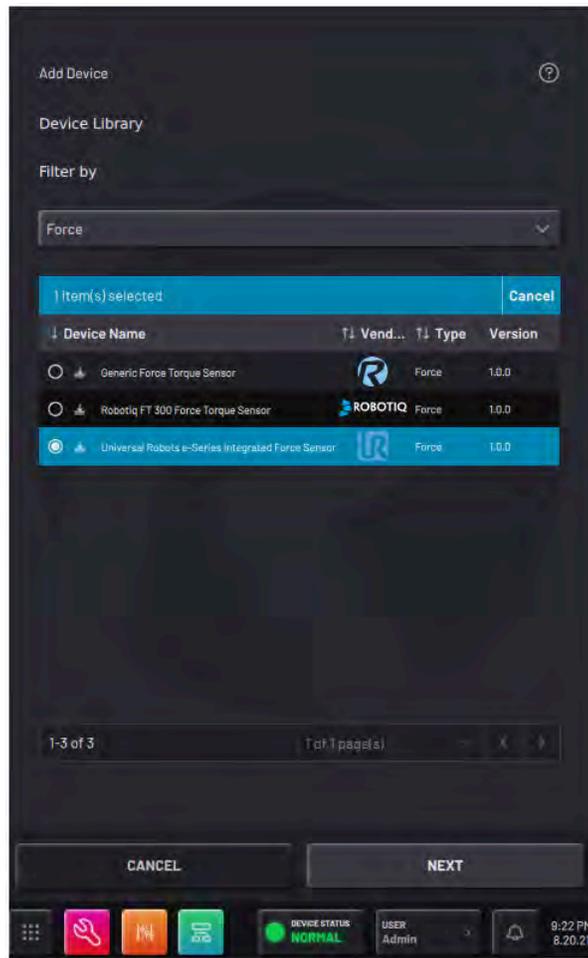


4 Enter the information prompted (i.e., the **Device Name**, **IP Address**, and **Robot Model**). A **Description** is optional. Then tap **NEXT**.

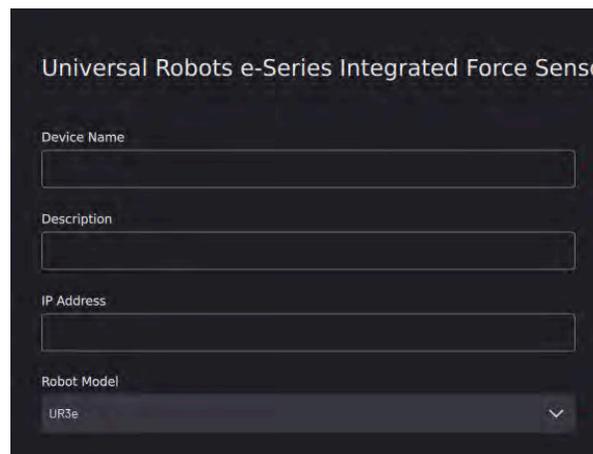

- 5 Tap the **DCP** checkbox for the signals that you want to see and zero in the Device Control Panel. You may give each signal a **Display Name**. When you're done, tap **SAVE** to finish the configuration.

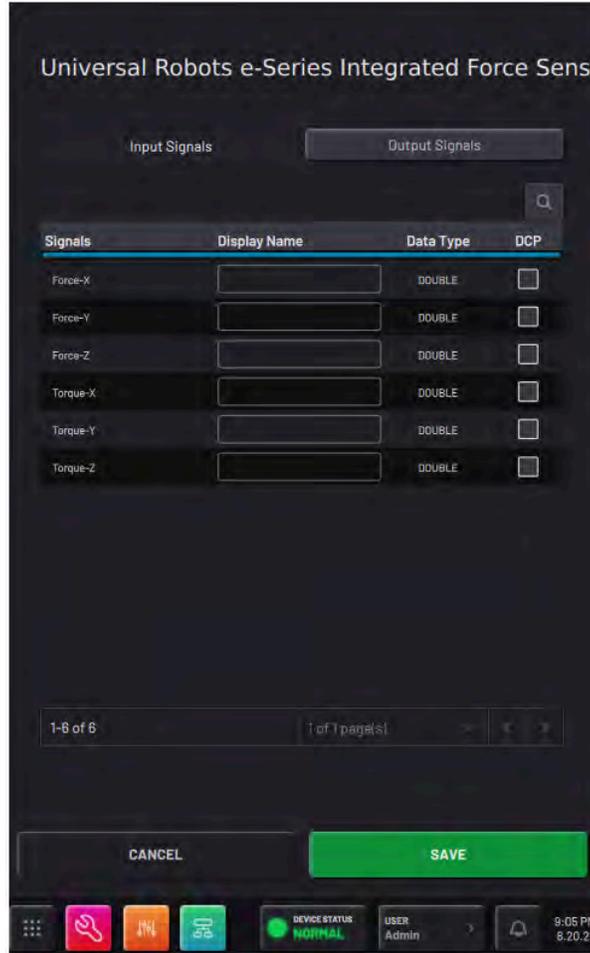


- 6 Forge/OS returns to the Device Configuration home screen. Make sure the force sensor appears on the configured devices table and that it is **enabled**.

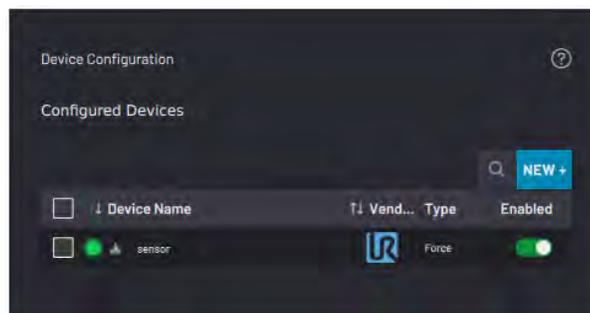


ADDING THE UR ROBOT IN DEVICE CONFIGURATION


1 In the **Admin** role, open the **Device Configuration** app.

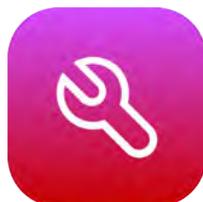

2 Tap **New +** to open the Device Library.

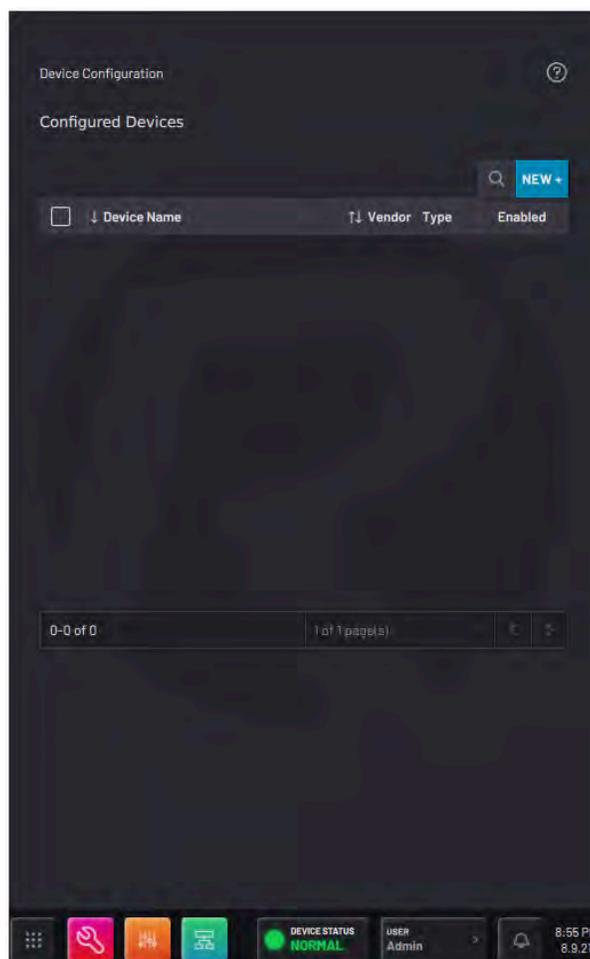


3 In the Device Library list, select **Universal Robots Robot**. Then tap **NEXT**.

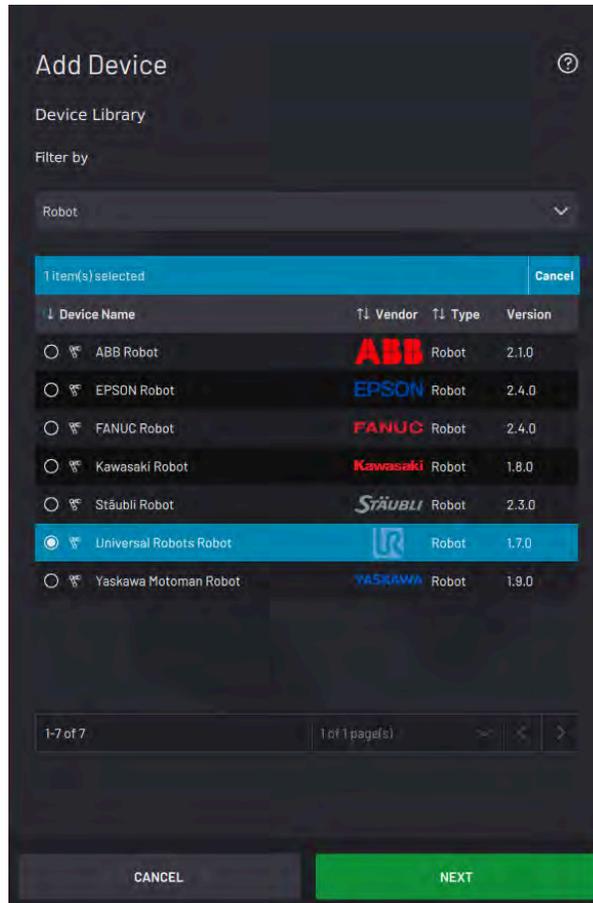

- 4 Type in a **Device Name**. Then type in the device **IP Address** that you entered in the PolyScope network settings. A **Description** is optional. Then select your **Robot** and **Controller** models. If you are using a force sensor device, select it from the dropdown. The dropdown lists configured force sensor devices.

Note: The force sensor selection applies **only** to a force sensor that is attached to the end of the robot arm. If you are using a force sensor device elsewhere in the work cell, set that up as a separate device unrelated to the robot arm.

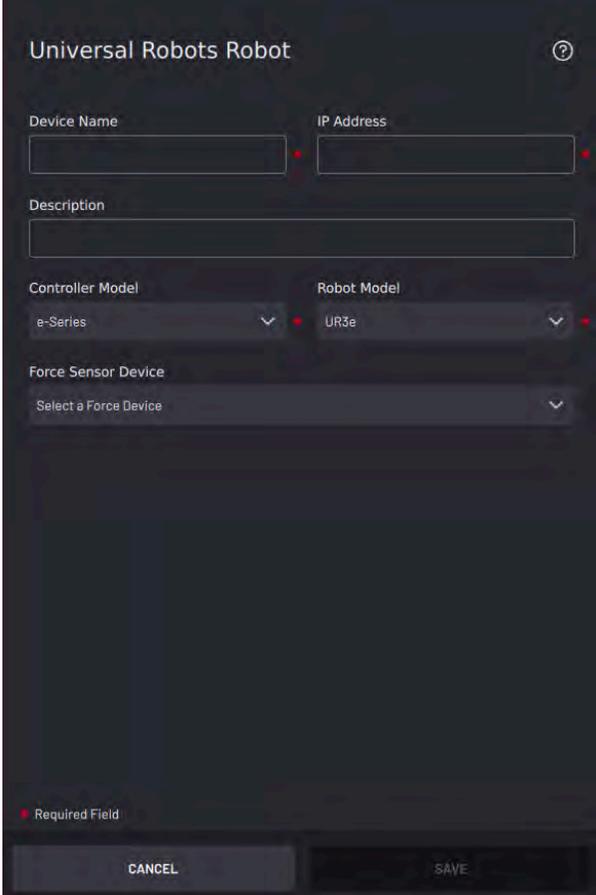

The screenshot shows a configuration form titled "Universal Robots Robot" with a help icon in the top right corner. The form contains the following fields:


- Device Name:** A text input field with a red asterisk indicating it is a required field.
- IP Address:** A text input field with a red asterisk indicating it is a required field.
- Description:** A text input field.
- Controller Model:** A dropdown menu with "e-Series" selected.
- Robot Model:** A dropdown menu with "UR3e" selected.
- Force Sensor Device:** A dropdown menu with "Select a Force Device" as the current selection.

At the bottom left, there is a legend: "Required Field" with a red asterisk. At the bottom, there are two buttons: "CANCEL" and "SAVE".

- 5 In Forge/OS, confirm your device settings and tap **SAVE**. Forge/OS attempts to connect with the robot controller for up to 20 seconds.

Note: When you first connect to a robot, it's normal to see some robot errors and/or warnings on the **READY pendant**. Ignore these for now. You will clear them after you finish adding the robot to Forge/OS.

- a If the robot controller fails to connect, you see this pop-up.

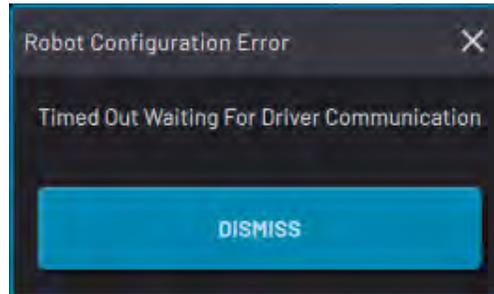


Click **DISMISS**, do the following, then try to tap **SAVE** again:


- Check the Ethernet connection between the robot controller and IPC.
- Check the network settings on the robot controller.
- Check if the robot controller is on and in the correct operating mode (in auto or remote mode).
- Select the correct robot controller and robot models in Device Configuration.

- 6 Leave the **Tool Center Points (TCPs)** and **Payloads** as the Default values. Instead of adding new TCPs and payloads here, set them up in Polyscope. Tap **NEXT**.

Note: For more information on setting up TCPs and payloads in Polyscope, refer back to the "Preparing Polyscope" section.

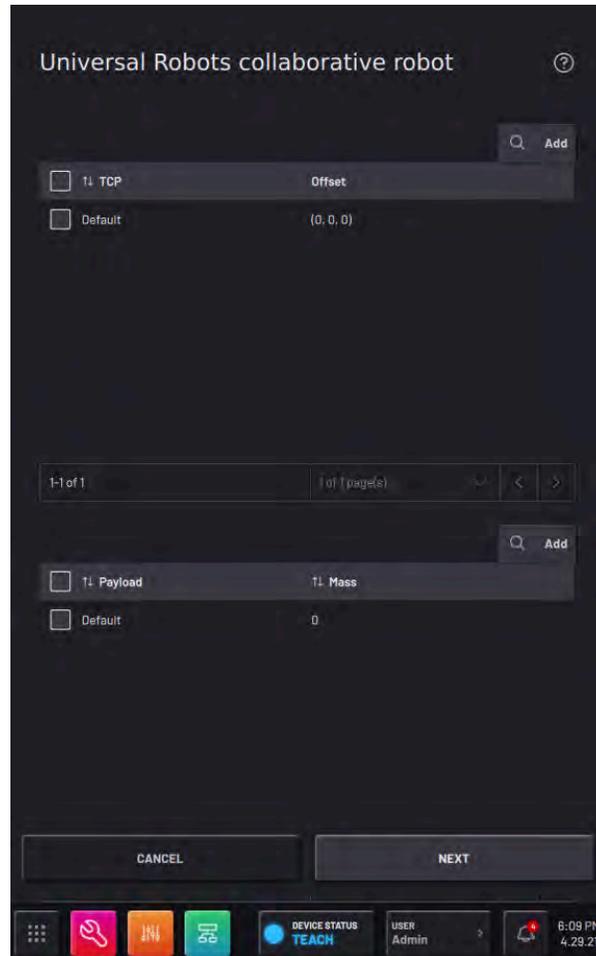

- 7 (Optional): Set up the robot controller's Input/Output (IO) signals for use in the Device Control Panel and Task Canvas.

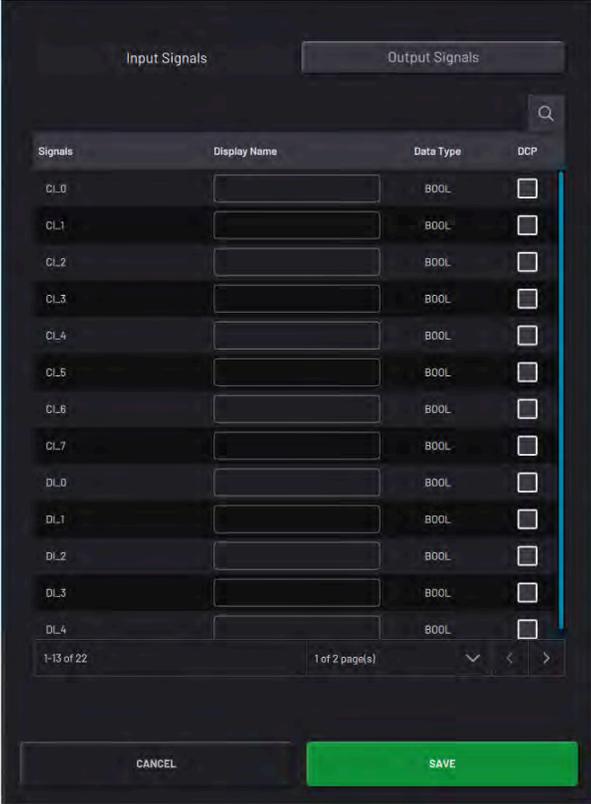

| Signals | Display Name | Data Type | DCP |
|---------|----------------------|-----------|--------------------------|
| CL.0 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| CL.1 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| CL.2 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| CL.3 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| CL.4 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| CL.5 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| CL.6 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| CL.7 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| DL.0 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| DL.1 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| DL.2 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| DL.3 | <input type="text"/> | BOOL | <input type="checkbox"/> |
| DL.4 | <input type="text"/> | BOOL | <input type="checkbox"/> |

a Enter a **Display Name** (i.e. "Open Machine Door", "Open Pneumatic Vise", or "Start Machining Cycle") to show what each signal does in other apps.

b If you want a signal to appear in the Device Control Panel, check the **DCP** box next to that signal.


Note: To use these I/O signals, integrate your I/O devices with the robot controller.

c Tap **SAVE**. Forge/OS returns to the Configured Devices list, which shows the new robot as **enabled**.

Note: A device is **enabled** when its switch is green and toggled to the right.

8 Follow these steps to clear robot errors:

a Tap the **Device Status** button on the Toolbar to expand the Device Status Panel. The robot is listed with two buttons: **MORE** and **RESET**.

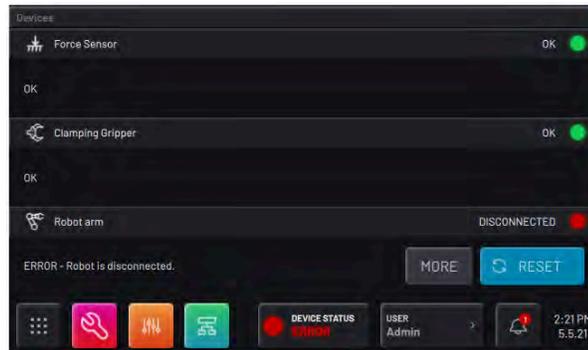

b Tap **RESET** to try to recover from the errors. If you can't **RESET** an error, tap **MORE** to get more details and instructions.

Congratulations! You are ready to control your robot in the Device Control Panel and Task Canvas apps.

APPENDIX A: SETTING UP FORGE/OS

INSTALLING FORGE/OS

Follow these steps to install Forge/OS and sign in to the Admin role. Installation takes about 30 minutes, depending on the resources of the IPC.

- 1 To install Forge/OS, follow these substeps. You need a Forge/OS installation USB flash drive. Contact your READY Robotics distributor for an installation USB drive.

Important: Installing Forge/OS will erase all data on the target hard drive.

- a Connect a monitor, keyboard, and mouse to the IPC where you want to install Forge/OS.



- b Plug the Forge/OS installation USB flash drive into the IPC.

Tip: If you need more USB ports, use a USB 3.0 hub.

- c Restart the IPC. While the IPC is powering on, press the keyboard hotkey that takes you to the Boot Menu.

Tip: The key that opens the Boot Menu depends on the **IPC** model. The most common keys that do this are ESC, F10, F11, or F12. Refer to your computer's documentation for boot options.

Note: If you're installing Forge/OS on a **Forge/Ctrl**, press F11. You may need to enter the **BIOS Admin password**. Contact READY Support if you run into this issue.


- d From the boot options, select **Install Forge/OS** to boot from the installation USB flash drive.

e The installer may take several minutes to load. Wait until the installation wizard opens.


f Select your language. Then click **Install Forge**.



g Choose a keyboard layout. Then click **Continue**.

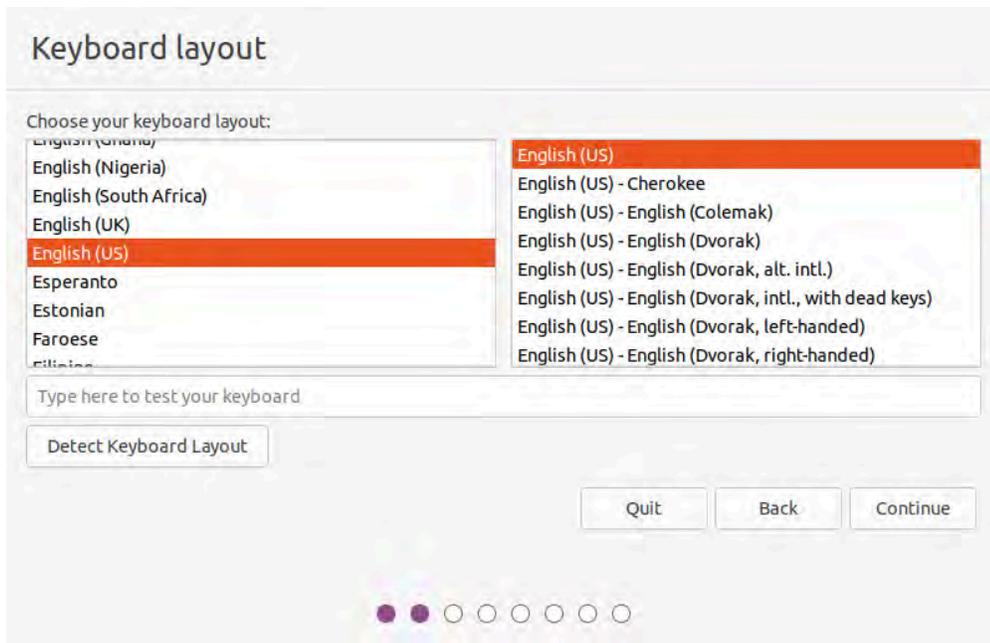


h Select **Minimal installation**. Uncheck **Download updates while installing forgeos**. Then click **Continue**.

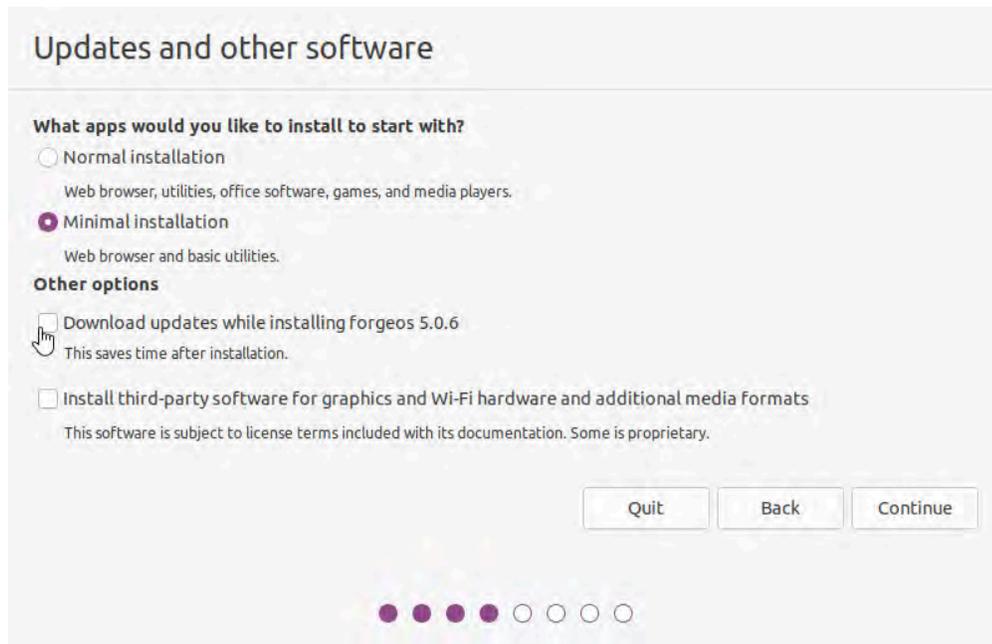


i Select **Erase disk and install forgeos**. Then click **Continue**.

Note: If Forge/OS is already installed, the installation wizard will show additional options. The goal is to erase the entire disk for a brand new installation.

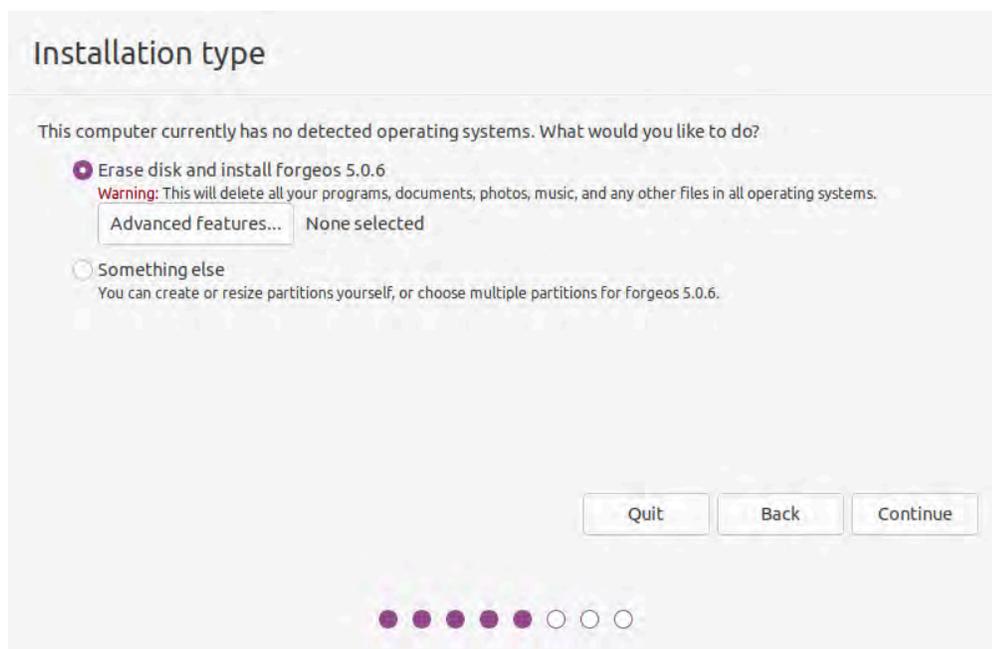


j Select the IPC hard drive for Forge/OS and click **Install Now**.

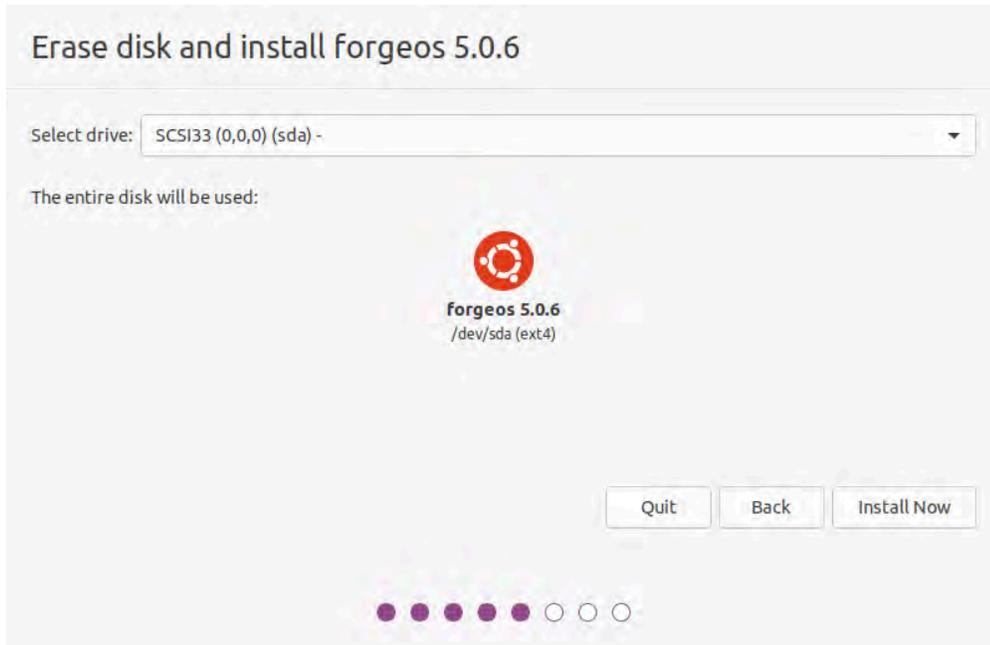

k Confirm that you want to erase the entire disk by clicking **Continue**.

l Make a note of the pendant instructions. If you're using a Forge/Ctrl, select the checkbox next to **This hardware is a Forge CTRL**.

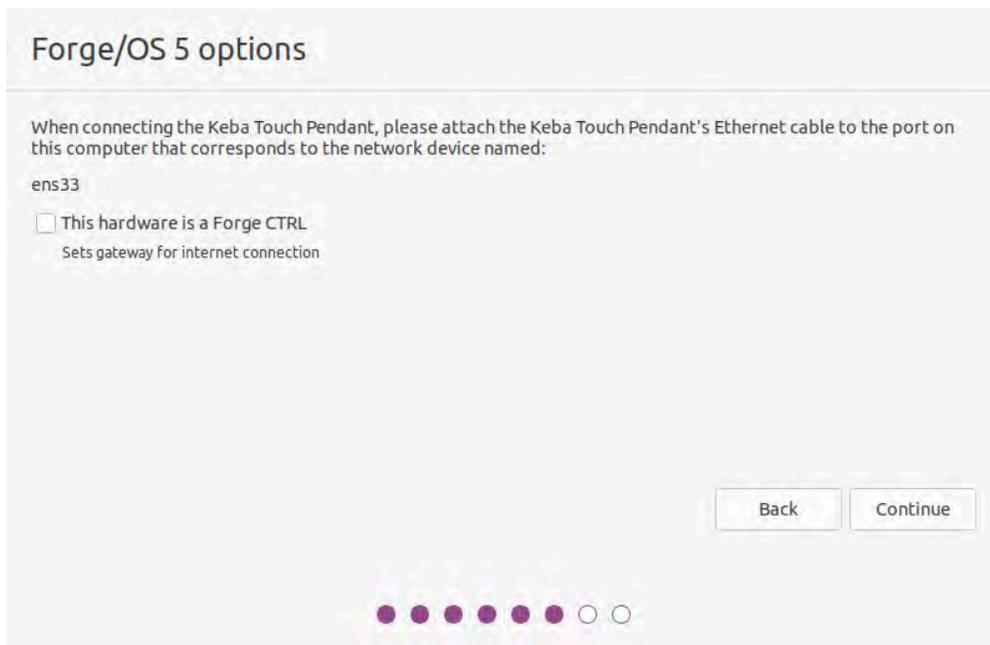

m Choose your timezone. Then click **Continue**.


n Choose your IPC's host name. The host name identifies the IPC on the network. Pick a username and password. Then click **Continue**.

Note: The username and password that you create here are for accessing the IPC desktop. They are NOT for signing into Forge/OS on the **READY pendant**.

- o Wait for the installer to copy and install Forge/OS.



- p Once the installation completes, click **Restart Now**.

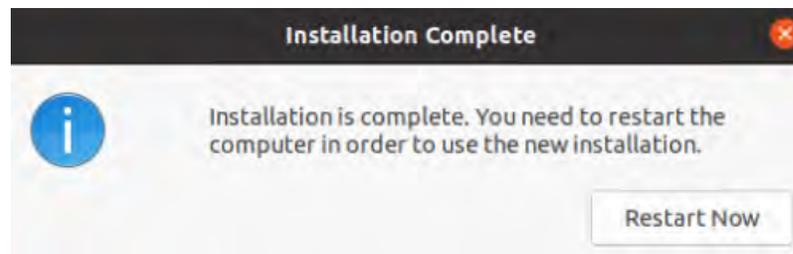


- q When prompted, remove the installation flash drive. Then reboot.

```
Please remove the installation medium, then reboot.  
_
```

- r Wait for Forge/OS to finish booting.

S

When you see the login screen with the Forge/OS 5 logo, Forge/OS is ready to run on the READY pendant! You don't need to sign in to the desktop. Disconnect the monitor, keyboard, and mouse that you used to install Forge/OS.

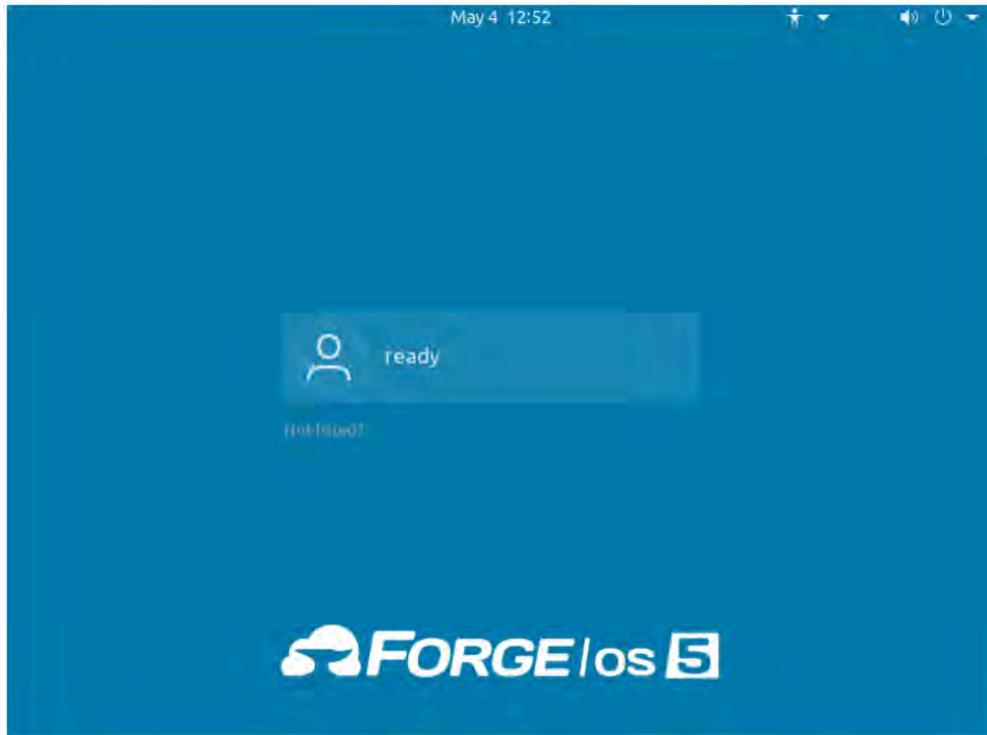

2 The READY pendant automatically finds and pairs with the IPC. The three LEDs on the screen help you track the status:

- **Pendant Network Connection:** This condition is satisfied when the READY pendant has a valid network connection (i.e., the Ethernet cable is plugged in).
- **Forge/OS IPC Detected:** This condition is satisfied when the READY pendant detects a Forge/OS IPC on the network.
- **Forge/OS IPC Paired:** This condition is satisfied when the READY pendant successfully pairs with the IPC. If pairing fails, it is automatically retried indefinitely.


When a condition is not satisfied, the LED is red. When a condition is in progress of becoming satisfied, a spinner around a READY logo appears to the right of the text. When a condition becomes satisfied, the LED turns green.



The UI shows the real-time state of each step. For example, if the pendant loses its network connection during pairing, all steps become undone.

If the READY pendant spends more than 60 seconds on any step, troubleshooting text displays. Common things to check are if the READY pendant network cable is plugged in, if the IPC is powered on, if the READY pendant and IPC are connected to the same network, and if there's only one READY pendant and one IPC on that network.

- 3 Tap **Admin** and sign in. The default Admin password is "forgeadmin".

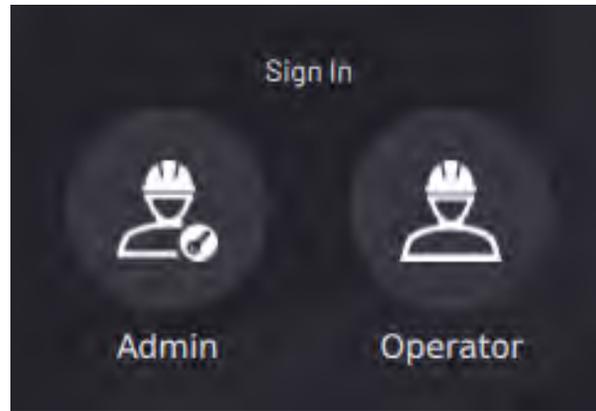

Note: After installation, you have limited access to Forge/OS until you activate it with a license code. See [Activating Forge/OS with a License Code](#).

ACTIVATING FORGE/OS WITH A LICENSE CODE


There are two methods to activate Forge/OS: **Online license activation** and **offline license activation**.

The table below lists the requirements for each method.

| Online License Activation | Offline License Activation |
|---|--|
| <ul style="list-style-type: none"> ▪ An internet-connected Forge/OS ▪ A valid Forge/OS license code | <ul style="list-style-type: none"> ▪ A 2GB or larger USB flash drive ▪ An internet-connected PC ▪ A valid Forge/OS license code |


Tip: Connect a USB keyboard to the port on the bottom of the **READY pendant** to type in any text field in Forge/OS.

- 1 On the Settings app main screen, tap **License**.

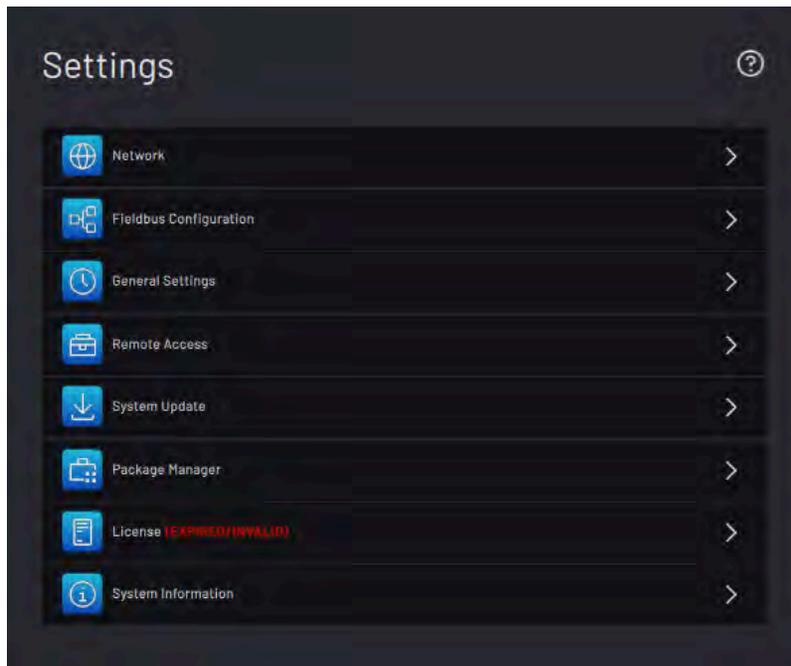

- 2 Type in your license code.


- 3 Choose **ONLINE LICENSE ACTIVATION** if Forge/OS is connected to the internet. If not, choose **OFFLINE LICENSE ACTIVATION**.

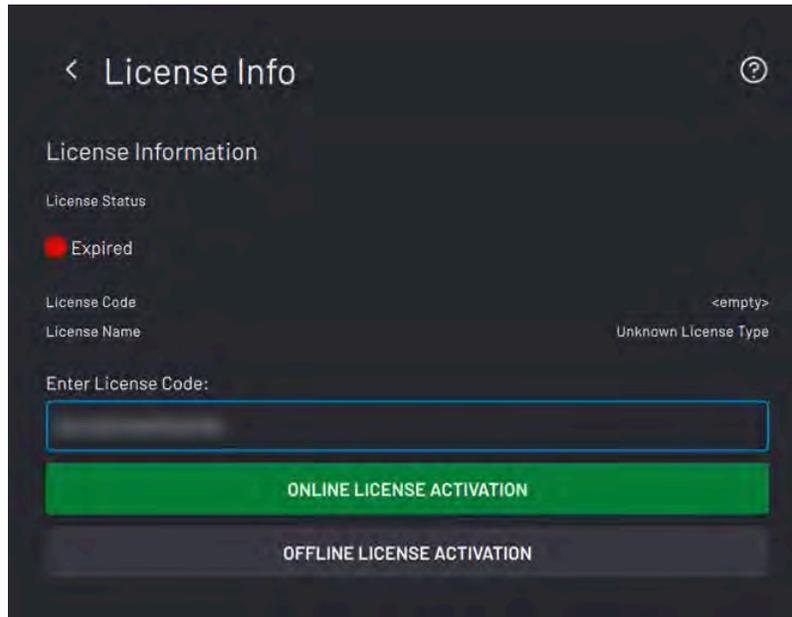


- 4 If you chose online license activation, you're done!

- 5 If you chose offline license activation, follow these substeps:


- a Insert the USB flash drive into your IPC. Tap **START WRITING CERTIFICATE TO USB DRIVE**.

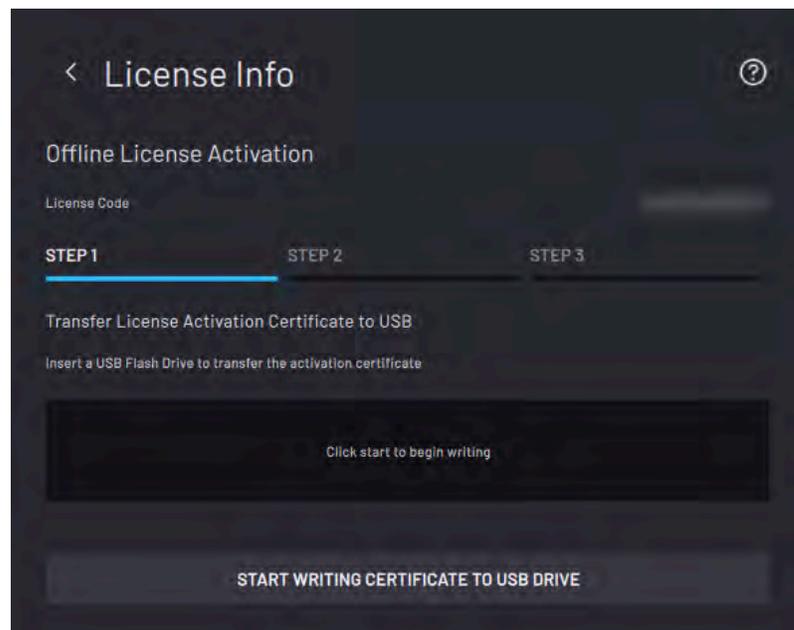

- b** When the files finish transferring, tap **NEXT**. Follow the instructions on the screen to convert the Activation Certificate to an Unlock Certificate using an internet-connected PC.

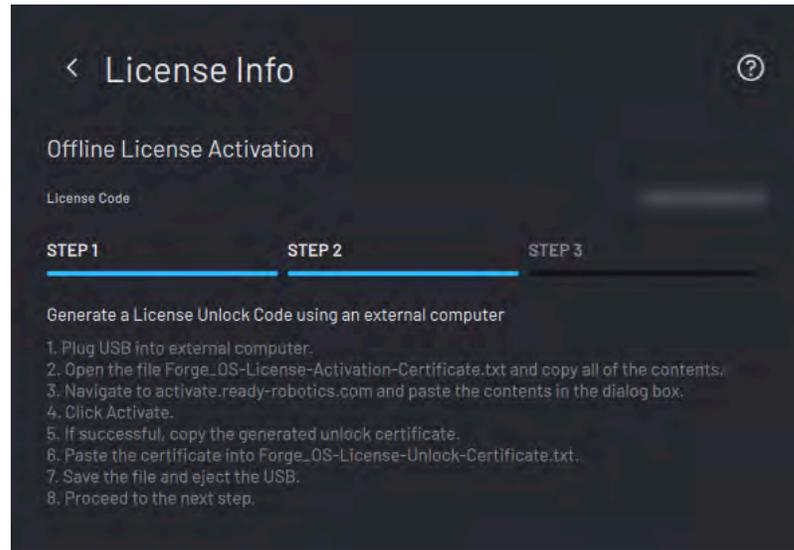

- c** Insert the USB flash drive back into your IPC. Tap **UNLOAD UNLOCK CERTIFICATE FROM USB DRIVE**.

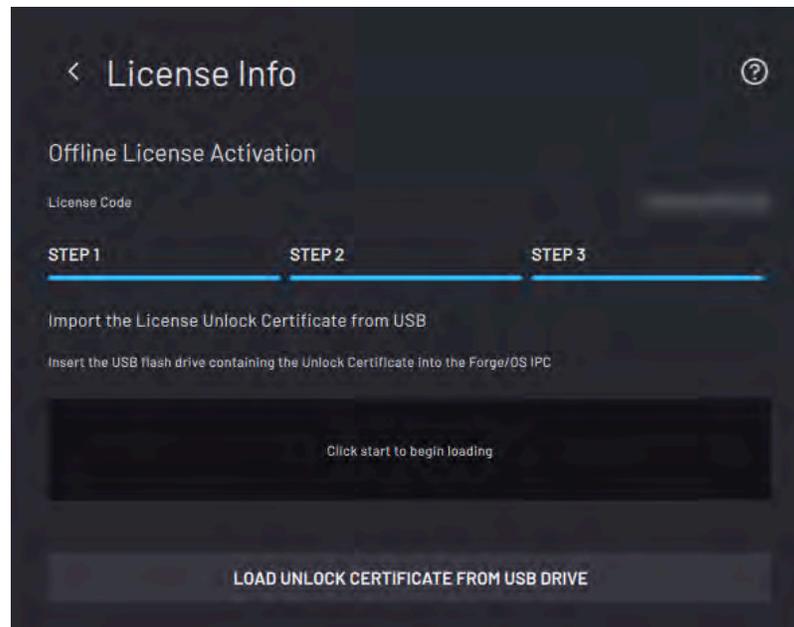

- d** Wait for the file to finish transferring. When the file transfer is complete, remove the USB flash drive and tap **SAVE**.
- e** Forge/OS returns to the licensing home screen and shows an active license. If the license status isn't active, restart these license activation steps. Double-check your license code.

CHOOSING PREFERENCES


These steps help you choose system preferences, including language, units, time, and network settings.

1 To change preferences for the first time, go to General Settings:

a On the Settings app main screen, tap **General Settings**.

b Change the Units of Measure, Time and Date settings, or the Admin login password.

Note: If you later forget your password, contact READY Robotics to reset it.

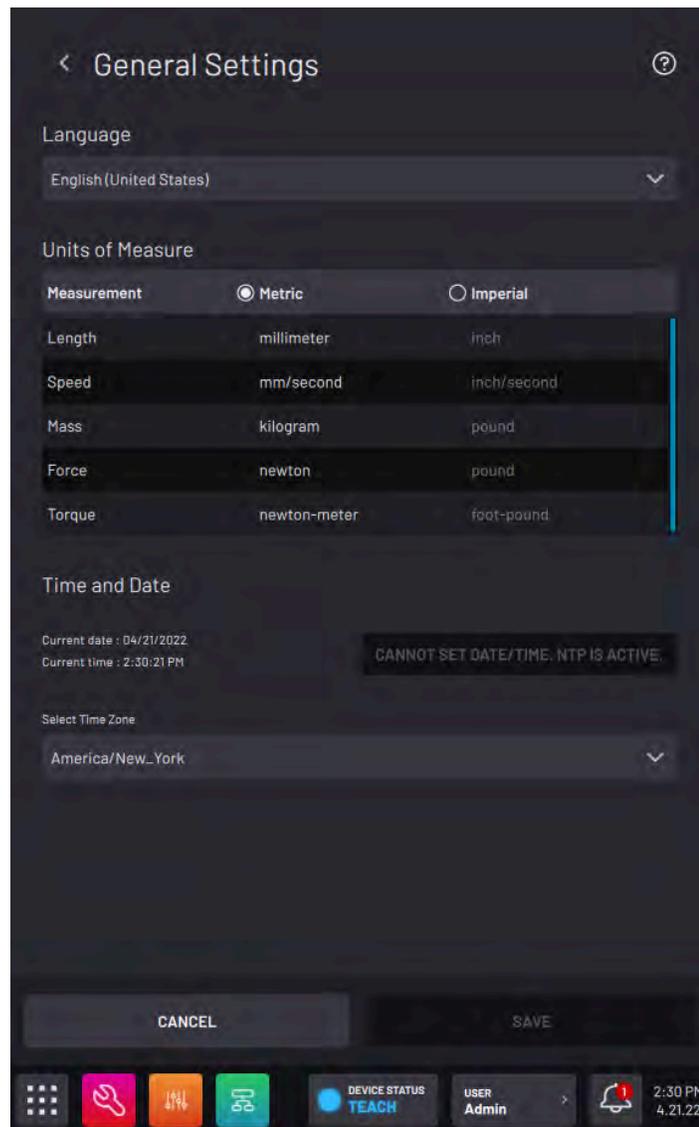

c Tap **SAVE** to save changes and exit the General Settings menu.

APPENDIX B: TROUBLESHOOTING

In Forge/OS, the UR e-series robot is stuck in Run mode. It doesn't go into Teach mode, even after disabling and re-enabling the device in Device Configuration.

To enable Teach mode, clear the Operational Mode password.

Refer to the "[Clearing Operational Mode Password on e-Series Robots](#)" section for more info.

RESOURCES

Want to learn more about how Forge/OS can empower you?

Visit **READY.academy** (ready.academy) for *FREE* hands-on courses to help you deploy a robotic system.

Visit **READY.market** (market.ready-robotics.com) for products and services offered by READY and our partners.

Visit our **Support** site (support.ready-robotics.com) for robot startup guides, FAQs, and more.

Visit our **Resources** page (ready-robotics.com/resources) for articles, whitepapers, and other resources.

If you encounter a problem and need to talk to someone, reach out to us.

- Email READY Robotics: support@ready-robotics.com
- Call READY Robotics: +1-833-732-3977

